



**This manual should be considered a permanent part of the motorcycle and should remain with the motorcycle when resold or otherwise transferred to a new owner or operator. The manual contains important safety information and instructions which should be read carefully before operating the motorcycle.**

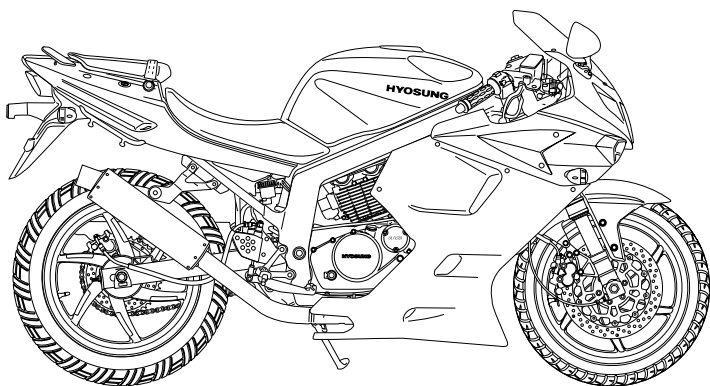

*Comet 250 R & Comet 125 R*

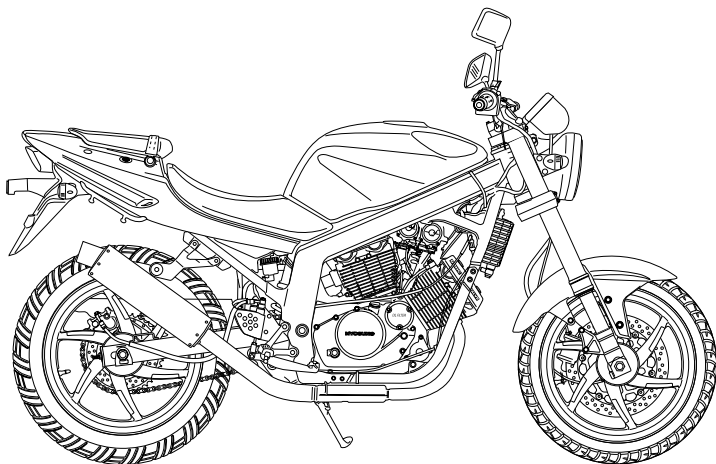

*Comet 250 & Comet 125*

## FOREWORD

THANK YOU for choosing **Hyosung** motorcycle. We at **Hyosung** have designed, tested and produced this motorcycle using the most modern technology available to provide you with much happy, enjoyable, safe riding. Motorcycling is one of the most exhilarating sports and insure your riding enjoyment, you should become thoroughly familiar with the information presented in this Owner's Manual before riding the motorcycle.

The proper care and maintenance that your motorcycle requires are outlined in this manual.

By following these instructions explicitly you will insure a long trouble-free operating life for your motorcycle. Your **Hyosung** dealer has experienced technicians that are trained to provide your machine with the best possible service with the right tools and equipment.

All information, illustrations photographs and specifications contained in this manual are based on the latest product information available at the time of publication. Due to improvements or other changes, there may be some discrepancies in this manual. Hyosung reserves the right to make changes at any time.

Please note that this manual applies to all specifications for all respective destinations and explains all equipments. Therefore, your model may have different standard features than shown in this manual.

 HYOSUNG MOTORS & MACHINERY INC.

© COPYRIGHT HYOSUNG MOTORS & MACHINERY INC.

## IMPORTANT

### BREAK-IN INFORMATION FOR YOUR MOTORCYCLE

The first 1,600km (1,000miles) are the most important in the life of your motorcycle.

Proper break-in operation during this time will help ensure maximum life and performance from your new motorcycle.

**Hyosung** parts are manufactured of high quality materials, and manufactured parts are finished to close tolerances. Proper break-in operation allows the machined surfaces to polish each other and mate smoothly.

Motorcycle reliability and performance depend on special care and restraint exercise during the break-in period. It is especially important that you avoid operating the engine in a manner which could expose the engine parts to excessive heat.

Please refer to the BREAK-IN section for specific break-in recommendations.

### WARNING / CAUTION / NOTE

Please read this manual and follow its instructions carefully. To emphasize special information the words 『WARNING』, 『CAUTION』 and 『NOTE』.

#### **WARNING**

**The personal safety of the rider may be involved. Disregarding this information could result in injury to the rider.**

#### **CAUTION**

**These instructions point out special service procedures or precautions that must be followed to avoid damaging the machine.**

#### **N O T E**

**This provides special information to make maintenance easier or important instructions clearer.**



## **WARNING**

### **Noise Control System (muffler assembly)**

#### **TAMPERING WITH NOISE CONTROL SYSTEM PROHIBITED**

Owners are warned that the law may prohibit :

- (a) The removal or rendering inoperative by any person other than for the purpose of maintenance, repair or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its any sale or delivery to the ultimate purchaser or while it is in use ; and
- (b) The use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

#### **MAINTENANCE :**

The exhaust system of this motorcycle requires no periodic maintenance.

The engine should be adjusted to the manufacture' s specifications and the spark plug should be kept in good condition. Running the engine with incorrectly operating spark plug or misadjusted carburetor may cause permanent damage to the catalyst and to the noise control system.

## CONSUMER INFORMATION

### SAFE RIDING RECOMMENDATION FOR MOTORCYCLE RIDERS

Motorcycle riding is great fun and an exciting sport. Motorcycle riding also requires that some extra precautions be taken to ensure the safety of the rider and passenger. These precautions are :



## WARNING

- Before first use of the 『Comet 250/R』 & 『Comet 125/R』, read this owner's manual carefully to become familiar with the 『Comet 250/R』 & 『Comet 125/R』's features, and safety and maintenance requirements. Review all instructions, requirements and warnings with the riders. Keep the owner's manual in the owner's manual storage compartment located under the seat.
- Before the rider's first use of the 『Comet 250/R』 & 『Comet 125/R』, make sure that he/she is familiar with the location and operation of all controls, and has been instructed in the proper operation of the motorcycle.
- For first use of the 『Comet 250/R』 & 『Comet 125/R』, find a level, open area for the rider to use to become familiar with the operation of controls and the operating and handling characteristics of the 『Comet 250/R』 & 『Comet 125/R』.



## WARNING

- Before each use, perform daily inspections with the rider. Specific items to check are listed in the INSPECTION BEFORE RIDING section on page 48 of this owner's manual.
- Make sure the rider wears a helmet, eye protection, and protective clothing (gloves, leather or heavy cloth pants, long sleeved shirt or jacket, boots).
- Permit use only by two rider. This motorcycle is designed for use only by two rider.
- Do not permit anyone to operate the 『Comet 250/R』 & 『Comet 125/R』 under the influence of alcohol or other drugs caused by damage to the motorcycle or altered handling characteristics.
- Observe periodic maintenance requirements your authorized HYOSUNG dealer is trained and equipped to perform this service.
- Drain gasoline from the fuel tank and carburetor prior to transporting the 『Comet 250/R』 & 『Comet 125/R』.
- Caution the rider and others near the 『Comet 250/R』 & 『Comet 125/R』 not to get close to or touch any moving parts or any heated areas such as the engine and exhaust system.
- Do not make any modifications to the 『Comet 250/R』 & 『Comet 125/R』. Modifications may make the motorcycle unsafe or illegal in your state.



## WARNING

『Comet 250/R』 & 『Comet 125/R』 are started as the battery ignition system.

Do not permit to start or operate the throttle grip after started without the battery caused by damage to the electrical system.

Always start or ride these motorcycles with the battery.



## WARNING

- Do not run the engine indoors or where there is little or no ventilation. Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless.
- Never leave the motorcycle running while unattended, even for a short time.



## WARNING

The 『Comet 250/R』 & 『Comet 125/R』 is equipped with the side stand ignition interlock system.

1. If the transmission is in neutral, you can start the engine regardless of clutch lever and side stand.
2. If the transmission is not in neutral, you can only start the engine with pulling in clutch lever and side stand up.

Make sure that the side stand ignition interlock system is working properly before riding.



## WARNING

While operating the 『Comet 250/R』 & 『Comet 125/R』, the rider should keep both feet on the footrests at all times, or injuries resulting from accidents. Moving the rider's feet from the footrests reduces the rider's ability to control the motorcycle, and could lead to an accident.



## WARNING

Keep both hands on the handgrips at all times when riding. Removing your hands from the handgrips reduces your ability to control the motorcycle, and could result in an accident.



## CAUTION

『Comet 250/R』 & 『Comet 125/R』 always come on the position lamp, meter lamp, tail lamp and license plate lamp when starting engine.



## WARNING

Always open the throttle gradually to prevent front wheel lifting. Failure to observe this precaution may result in loss of control and an accident.

## CAUTION


WHEN KEEPING FOR LONG PERIOD :

1. Supply enough the fuel in the fuel tank.
2. Do drain wholly the fuel in the carburetor.
3. Remove the battery from the motorcycle.

## CAUTION

- The trunk could be heated. Don't keep anything that doesn't endure heat.
- Don't keep the fragile.
- Check if it is locked.
- The unlocking of rear seat could cause serious accident.
- Don't allow water to get inside the trunk or it could damage.
- Don't keep the valuables in the trunk when leaving unattended.
- Loading limit of trunk : 1kg (2.21lbs)

## WARNING

Do not operate for the ignition switch is in the "OFF" or "LOCK" position or the engine stop switch is in the "  " position while driving at one's pleasure.

## WEAR A HELMET

## WARNING

Motorcycle safety equipment starts with a quality safety helmet. One of the most serious injuries that can happen is a head injury. ALWAYS wear a properly approved helmet. You should also wear a suitable eye protection.

## RIDING APPAREL

## WARNING

Loose fancy clothing can be uncomfortable and unsafe in terms of riding your motorcycle. Choose good quality motorcycle riding apparel in terms of riding your motorcycle.

## INSPECTION BEFORE RIDING

## WARNING

Review thoroughly the instructions in the "INSPECTION BEFORE RIDING" section of this manual. Do not forget to perform an entire safety inspection to ensure the safety of the rider and its passenger.



⦿ **FAMILIARIZE YOURSELF WITH THE MOTORCYCLE**

 **WARNING**

Your riding skill and mechanical knowledge form the foundation for safe riding practices.

We suggest that you practice riding your motorcycle in a non-traffic situation until you are thoroughly familiar with your machine and its controls. Remember practice makes perfect.

⦿ **KNOW YOUR LIMITS**

 **WARNING**

Ride within the boundaries of your own skill at all times. Knowing these limits and staying within them will help you to avoid accidents.

⦿ **BE EXTRA SAFETY CONSCIOUS ON BAD WEATHER DAYS**

 **WARNING**

Riding on bad weather days, especially wet ones, requires extra caution. Braking distances double on a rainy day. Stay off of the painted surface marks, manhole covers and greasy appearing areas as they can be especially slippery.

Use extreme caution at railway crossings and on metal gratings and bridges. Whenever you have a doubt about road condition, slow down!

## ACCESSORY INSTALLATION AND PRECAUTION SAFETY TIPS

There are a great variety of accessories available to **Hyosung** owners. **Hyosung** can not have direct control over the quality or suitability of accessories you may wish to purchase except genuine parts.

The addition of unsuitable accessories can lead to unsafe operating conditions. It is not possible for **Hyosung** to test each accessory on the market or combinations of all available accessories, however, your dealer can assist you in selecting quality accessories and installing them correctly.

Use extreme caution when selecting and installing the accessories for your **Hyosung**. We have developed some general guidelines which will aid you when deciding whether, and how to equip your motorcycle.

1. In case that additional weight or aerodynamic affecting accessories are installed, they should be mounted as low as possible, as close to the motorcycle and as near the center of gravity as is feasible. The mounting brackets and other attachment hardware should be carefully checked to ensure that it provides for a rigid, nonmovable mount. Weak mounts can allow the shifting of the weight and create a dangerous, unstable condition.
2. Inspect for proper ground clearance and bank angle. An improperly mounted load could critically reduce these two safety factors. Also

determine that the "load" does not interfere with the operation of the suspension steering or other control operations.

3. Accessories fitted to the handlebars or the front fork area can create serious stability problems. This extra weight will cause the motorcycle to be less responsive to your steering control. The weight may also cause oscillations in the front end and lead to instability problems. Accessories added to the machine should be as light as possible and kept to a minimum.
4. The motorcycle may be affected by a lifting condition or by an instability in cross winds or when being passed or passing large vehicles. Improperly mounted or poorly designed accessories can result in an unsafe riding condition, therefore caution should be used when selecting and installing all accessories.
5. Certain accessories displace the rider from his or her normal riding position. This limits the freedom of movement of the rider and may limit his or her control ability.
6. Additional electrical accessories may damage the existing electrical system. Severe overloads may damage the wiring harness or create a dangerous situation due to the loss of electrical power during the operation of the motorcycle.

When carrying a load on the motorcycle, mount it as low as possible and as close as possible to the machine. An improperly mounted load can create a high center of gravity which is very dangerous and makes the motorcycle difficult to handle. The size of the "load" can also affect the

aerodynamics and handling of the motorcycle.

Balance the load between the left and right side of the motorcycle and fasten it securely.



## **WARNING**

**Modification of the motorcycle, or removal of original equipment may render the vehicle unsafe or illegal.**

## TABLE OF CONTENTS

<b>1. SERIAL NUMBER LOCATION</b> . . . . .	<b>14</b>
<b>2. FUEL AND OIL RECOMMENDATION</b> . . . . .	<b>15</b>
FUEL	
ENGINE OIL	
<b>3. NAMES OF EACH PARTS [ <i>Comet-250 R &amp; Comet-125 R</i> ]</b> . . . . .	<b>16</b>
<b>4. NAMES OF EACH PARTS [ <i>Comet-250 &amp; Comet-125</i> ]</b> . . . . .	<b>19</b>
<b>5. CONTROLS</b> . . . . .	<b>22</b>
IGNITION SWITCH	
IGNITION KEY	
INSTRUMENT PANEL ( <i>Comet-250 R &amp; Comet-125 R</i> )	
INSTRUMENT PANEL ( <i>Comet-250 &amp; Comet-125</i> )	
LEFT HANDLE SWITCH	
RIGHT HANDLE SWITCH	
CARBURETOR CHOKE LEVER	
REAR BRAKE PEDAL	
GEARSHIFT LEVER	
FOOTRESTS	
SIDE STAND	
SEAT LOCK	
TRUNK	
REAR SHOCK ABSORBER	
<b>6. SUPPLY OF GASOLINE AND ENGINE OIL</b> . . . . .	<b>37</b>
GASOLINE	
ENGINE OIL	
<b>7. RIDING TIPS</b> . . . . .	<b>41</b>
STARTING THE ENGINE	
STARTING OFF	
USING THE TRANSMISSION	
RIDING ON HILLS	
STOPPING AND PARKING	



<b>8. BREAK-IN</b> . . . . .	<b>46</b>
<b>9. INSPECTION BEFORE RIDING</b> . . . . .	<b>48</b>
<b>10. PERIODIC MAINTENANCE</b> . . . . .	<b>49</b>
<b>11. INSPECTION AND MAINTENANCE</b> . . . . .	<b>52</b>
TOOL	
ENGINE OIL	
FUEL HOSE	
GASOLINE	
RUBBER CAP OF CABLES	
EXHAUST PIPE AND MUFFLER	
FRONT FORK	
REAR SHOCK ABSORBER	
BATTERY	
AIR CLEANER	
SPARK PLUG	
CARBURETOR	
CLUTCH CABLE	
DRIVE CHAIN	
BRAKES	
TIRE	
REPLACEMENT OF THE LAMP	
WHEN THE ENGINE REFUSES TO START	
WHEN KEEPING FOR LONG PERIOD	
CLEANING PROCEDURE	
<b>12. LABEL</b> . . . . .	<b>73</b>
<b>13. SPECIFICATIONS</b> . . . . .	<b>76</b>

## SERIAL NUMBER LOCATION

The frame and/or engine serial numbers are used to register the motorcycle. They are also to assist your dealer in terms of ordering parts or referring to special service information.

Frame number :

Engine number :

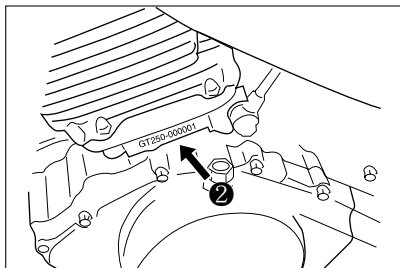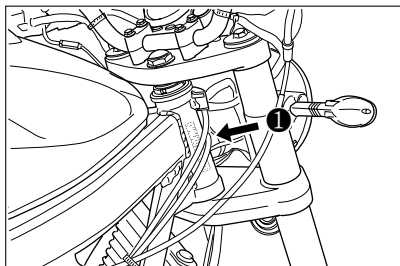

The frame number ① is stamped on the steering head tube.

The engine serial number ② is stamped on the left upside of the crankcase assembly.

Please write down the numbers in the box provided below for your future reference.

## FUEL AND OIL RECOMMENDATION

### FUEL

Use unleaded gasoline with an octane rating of 91 or higher.

Unleaded gasoline can extend spark plug life and exhaust components life.

### CAUTION

**Spilling gasoline can damage the painted surfaces.**

**Be careful not to spill any fuel when filling the fuel tank.**

**Wipe spilled gasoline up immediately.**

### WARNING

- When refueling, always shut the engine off and turn the ignition key to the "OFF" position. Never refuel near the flames, sparks and heat sources.
- Do not overfill the fuel tank. Do not fill the fuel tank above the entrance lower end.

### ENGINE OIL

#### ■ ENGINE OIL SPECIFICATION

Classification system	Grade	Remarks
API	Over SL	
SAE	10W/40	

※ If a SAE 10W/40 motor oil is not available, select alternative according to the following chart.

Temperature	°C		°F					
	-30	-20	-10	0	10	20	30	40
ENGINE OIL					20W50			
					15W40 15W50			
					10W40 10W50			
					10W30			
	-30	-20	-10	0	10	20	30	40
	-22	-4	14	32	50	68	86	104

Using a premium quality four stroke motor oil will increase the service life of your motorcycle.


### WARNING

- Don't mix the unrecommended oil. It could damage the engine.
- When refilling the oil, don't allow the dust to get inside.
- Mop the oil spilt.
- Don't put the patch on the filler cap. It could disturb the oil to be provided and damage the engine.

---

## NAMES OF EACH PARTS [ *Comet 250 R* & *Comet 125 R* ]

---

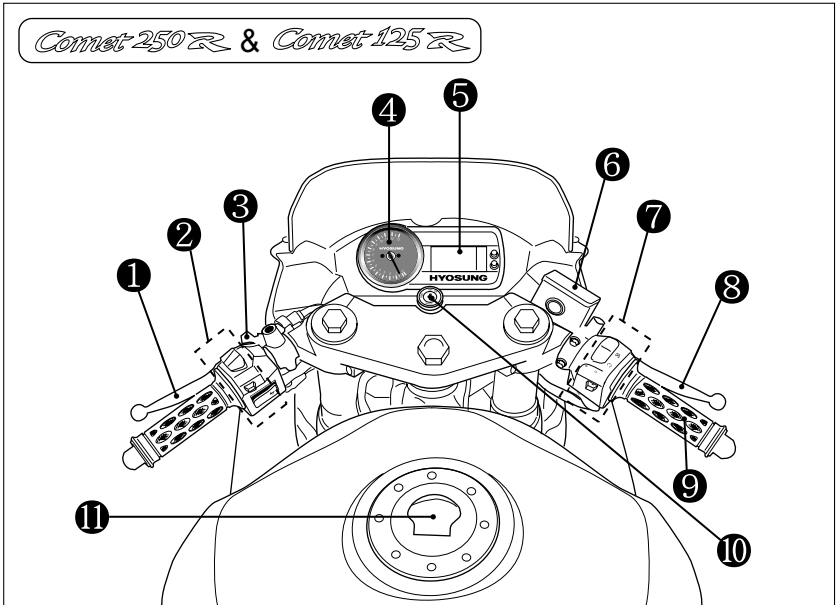


- ① Clutch lever
- ② Left handle switches
- ③ Choke lever
- ④ Tachometer
- ⑤ Speedometer
- ⑥ Front brake fluid reservoir

- ⑦ Right handle switches
- ⑧ Front brake lever
- ⑨ Throttle grip
- ⑩ Ignition switches
- ⑪ Fuel tank cap



*Comet 250 R & Comet 125 R*

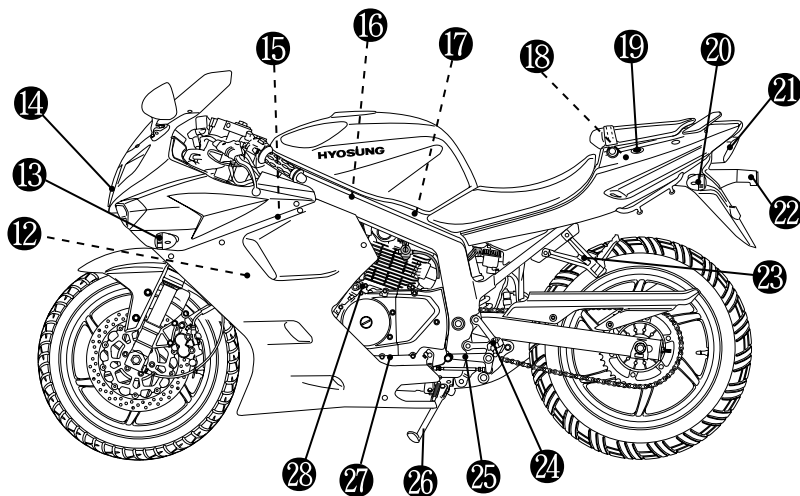


- ⑫ Spark plug (Front)
- ⑬ Front turn signal lamp
- ⑭ Head lamp
- ⑮ Ignition coil (Front)
- ⑯ Ignition coil (Rear)
- ⑰ Spark plug (Rear)
- ⑱ Fuse
- ⑲ Seat lock
- ⑳ Rear turn signal lamp

- ㉑ Tail / Brake lamp
- ㉒ License plate lamp
- ㉓ Passenger footrests
- ㉔ Footrests
- ㉕ Gearshift lever
- ㉖ Side stand
- ㉗ Engine oil drain plug
- ㉘ Throttle stop screw

## NOTE

“-----” : means the invisible parts.

*Comet 250 R & Comet 125 R*

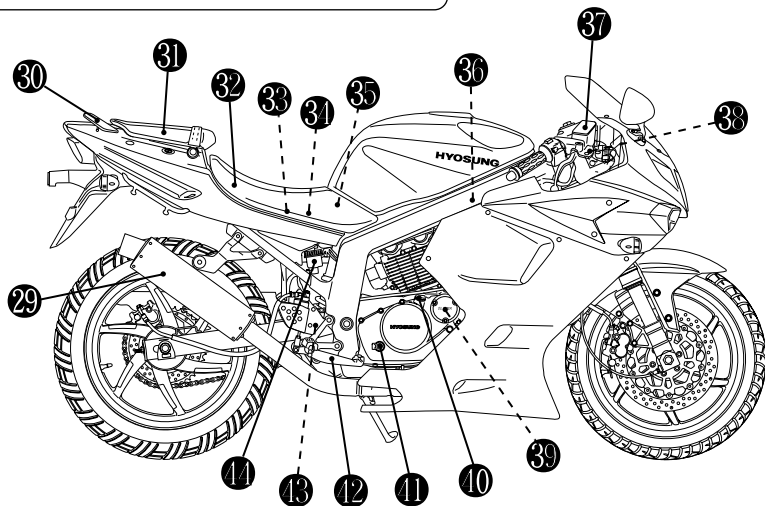


- |                      |                                |
|----------------------|--------------------------------|
| ②⑨ Muffler           | ③⑦ Front brake fluid reservoir |
| ③① Rear carrier      | ③⑧ Front brake lamp switch     |
| ③① Rear seat & Trunk | ③③ Engine oil filter           |
| ③② Front seat        | ④① Engine oil filler cap       |
| ③③ Tools             | ④② Engine oil level lens       |
| ③④ Battery           | ④③ Rear brake pedal            |
| ③⑤ Fuel pump         | ④④ Rear brake lamp switch      |
| ③⑥ Air cleaner       | ④⑤ Rear brake fluid reservoir  |

## NOTE

“-----” : means the invisible parts.


## NAMES OF EACH PARTS [ *Comet 250 & Comet 125* ]

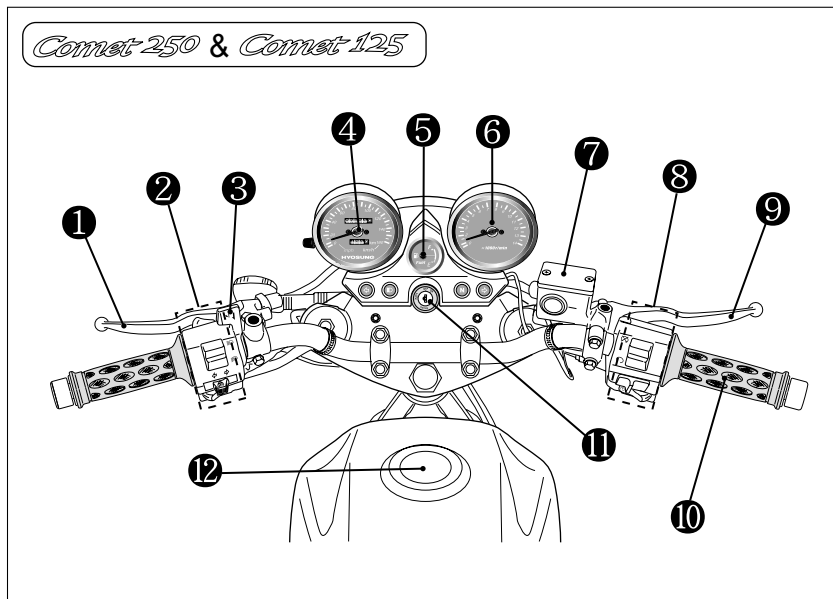

- ① Clutch lever
- ② Left handle switches
- ③ Choke lever
- ④ Speedometer
- ⑤ Fuel meter
- ⑥ Tachometer

- ⑦ Front brake fluid reservoir
- ⑧ Right handle switches
- ⑨ Front brake lever
- ⑩ Throttle grip
- ⑪ Ignition switches
- ⑫ Fuel tank cap

*Comet 250 & Comet 125*

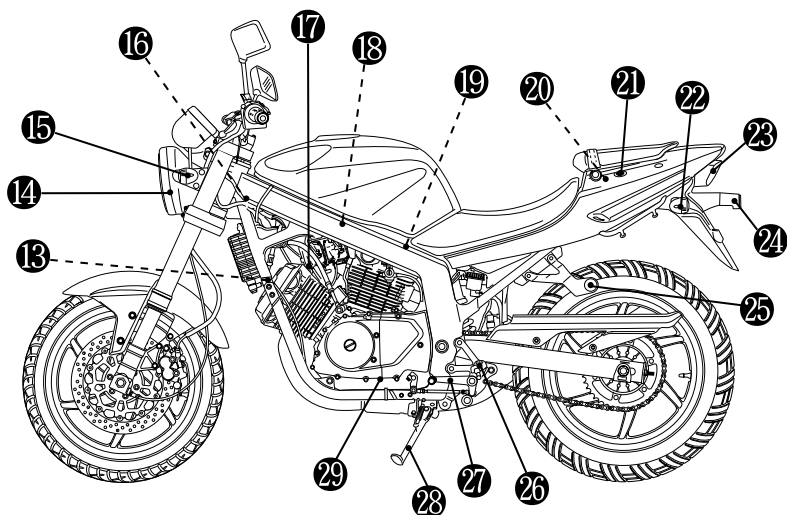


- ⑬ Spark plug (Front)
- ⑭ Head lamp
- ⑮ Front turn signal lamp
- ⑯ Ignition coil (Front)
- ⑰ Throttle stop screw
- ⑱ Ignition coil (Rear)
- ⑲ Spark plug (Rear)
- ⑳ Fuse
- ㉑ Seat lock

- ㉒ Rear turn signal lamp
- ㉓ Tail / Brake lamp
- ㉔ License plate lamp
- ㉕ Passenger footrests
- ㉖ Footrests
- ㉗ Gearshift lever
- ㉘ Side stand
- ㉙ Engine oil drain plug

## NOTE

“-----” : means the invisible parts.

*Comet 250 & Comet 125*

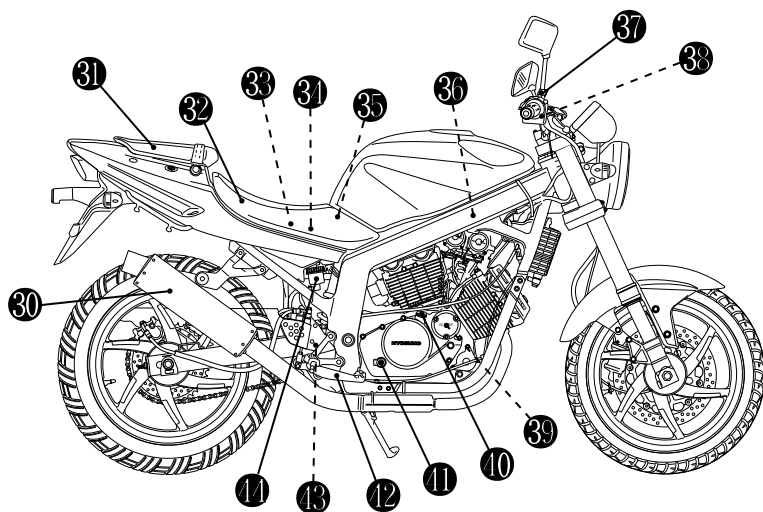

- ⑩ Muffler
- ⑪ Rear seat & Trunk
- ⑫ Front seat
- ⑬ Tools
- ⑭ Battery
- ⑮ Fuel pump
- ⑯ Air cleaner
- ⑰ Front brake fluid reservoir


- ⑱ Front brake lamp switch
- ⑲ Engine oil filter
- ⑳ Engine oil filler cap
- ㉑ Engine oil level lens
- ㉒ Rear brake pedal
- ㉓ Rear brake lamp switch
- ㉔ Rear brake fluid reservoir

## NOTE

“-----” : means the invisible parts.

## CONTROLS

### IGNITION SWITCH

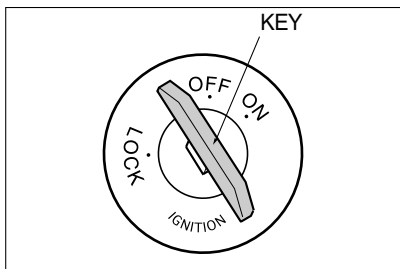

The ignition switch has three positions :

#### ⊙ “OFF” POSITION

All electrical circuits are cut off.

The engine will not start. The key can be removed.

#### ⊙ “ON” POSITION

The ignition circuit is completed and the engine can now be started. The key cannot be removed from the ignition switch in this position.

#### ⊙ “LOCK” POSITION

To lock the steering, turn the handlebar all the way to the left. Push down the key to the “OFF” position and turn it to the “LOCK” position after come up again and remove the key.

All electrical circuits are disconnected.

### IGNITION KEY


These motorcycles are equipped with a pair of identical ignition keys. Keep the spare key in a safe place.

Your motorcycle ignition keys are stamped with an identifying number. This number is used when making replacement keys. Please write your key number in the box provided for your future reference.

Key number :

## INSTRUMENT PANEL

( Comet 250 R & Comet 125 R )

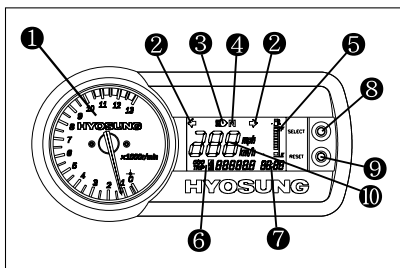

### ① TACHOMETER

The tachometer indicates the engine speed in revolutions per minutes (rpm).

### ② TURN SIGNAL INDICATOR LAMP

When the turn signals are being operated either to the right or to the left, the indicator will flash at the same time.

### ③ HIGH BEAM INDICATOR LAMP

The high beam indicator lamp will come on when the head lamp high beam is turned on.

### ④ NEUTRAL INDICATOR LAMP

The neutral indicator lamp will come on when the transmission is in neutral.

The lamp will go out when you shift into any gear other than neutral.

 
## ⚠ CAUTION

When the ignition switch is turned to the "ON" position, the display of speedometer will come on.


## ⚠ CAUTION

To adjust the light of speedometer display, push the switch ⑧ (in the normal mode) for 0.6 ~ 1 seconds while you want to change.

[Light of speedometer display]



## ⑤ FUEL METER

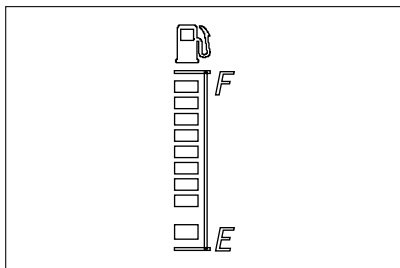

'Comet 250 R' & 'Comet 125 R' 's the speedometer is VFD (Vacuum Fluorescent Display) type, it indicates the remaining fuel amount in the fuel tank.

The "F"(Full) mark indicates the fuel tank is full.

The "E"(Empty) mark indicates the fuel tank is empty or nearly so.

When the remaining fuel is approximately 3.4 ℓ, the red lamp of "E"(Empty) mark comes on only.

Fill the fuel tank before the red lamp of "E"(Empty) mark came on only.

The fuel tank capacity is 17.0 ℓ.

### ⚠ CAUTION

When the red lamp of "E" mark comes on only, you should add fuel to the fuel tank at the first opportunity to avoid running out of fuel.


### ⚠ CAUTION

For checking the fuel meter, hold the motorcycle vertically and the ignition switch "ON".

## ⑥ ODOMETER / TRIP METER

The display in it has three functions, odometer and two trip meters.

The display changes odometer or trip meter, as indicated before turning the ignition switch off.

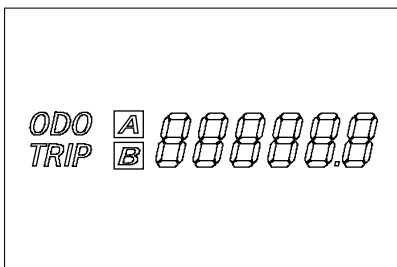


The odometer registers the total distance that the motorcycle has been ridden.

The two trip meters are resettable odometer.

They can register two kinds of distance at the same time. For instance, trip meter **A** can register the trip distance and trip meter **B** can register the distance between fuel stops.

To change the display, push the switch ⑨ (in the normal mode) for 0.6 ~ 1 seconds while the display indicates the odometer, trip meter **A** or trip meter **B** you want to change.



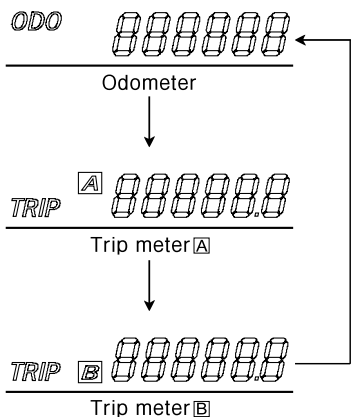


To reset the trip meter to zero, push the switch ⑨ (in the normal mode) for 2 seconds while the display indicates trip meter A or B you want to reset.

## WARNING

Operating the display while riding can be hazardous. Removing a hand from the handlebars can reduce your ability to control the motorcycle.

Always keep both hands on the handlebars while riding.

## ⑦ CLOCK

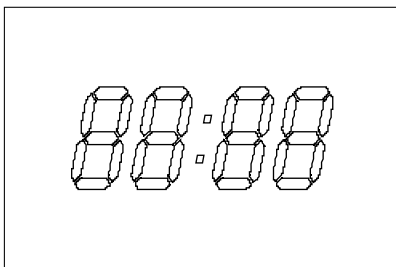

The clock indicates 12-hour mode. Follow the procedure below to adjust the clock.

1. Push the switch ⑧ (in the normal mode) for 2 seconds until the hour and minutes display blink. It is the clock reset mode.
2. Adjust the hour display by pushing the switch ⑨ (in the clock reset mode) for 0.6 ~ 1 seconds.
3. Adjust the minutes display by pushing the switch ⑧ (in the clock reset mode) for 0.6 ~ 1 seconds.
4. Push the switch ⑧ for 2 seconds to resume in the normal mode.

## CLOCK ADJUSTMENT

Mode	Switch	Push it for	Adjustment
Normal	Select (⑧)	2 seconds	Normal mode → Clock reset mode
Clock reset mode	Reset (⑨)	0.6 ~ 1 seconds	Increase the hour of clock
	Select (⑧)	0.6 ~ 1 seconds	Increase the minutes of clock
	Select (⑧)	2 seconds	Clock reset mode → Normal mode

## ⑧ SELECT SWITCH

Use this switch to adjust the following :

### ● In the normal mode

Push it for	Adjustment
0.6 ~ 1 seconds	To adjust the light of speedometer display (100% → 75% → 50% → 25% → 100%)
2 seconds	Normal mode → Clock reset mode

### ● In the clock reset mode

Push it for	Adjustment
0.6 ~ 1 seconds	Increase the minutes of clock
2 seconds	Clock reset mode → Normal mode

## ⑨ RESET SWITCH

Use this switch to adjust the following :



### ● In the normal mode

Push it for	Adjustment
0.6 ~ 1 seconds	Odometer → Trip meter <b>[A]</b> → Trip meter <b>[B]</b> → Odometer
2 seconds	To reset the trip meter to zero, while the display indicates trip meter <b>[A]</b> or <b>[B]</b>

### ● In the clock reset mode

Push it for	Adjustment
0.6 ~ 1 seconds	Increase the hour of clock

## ⑩ SPEEDOMETER

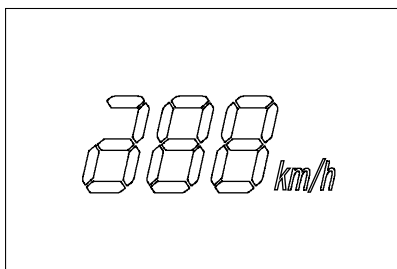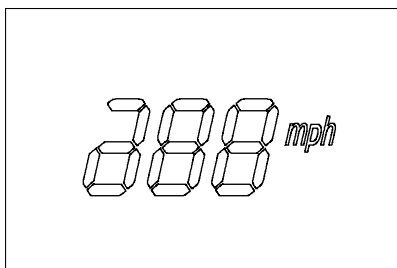


The speedometer indicates the road speed in kilometers or miles per hour.


## INSTRUMENT PANEL

( *Comet 250 & Comet 125* )

『 *Comet 250* 』

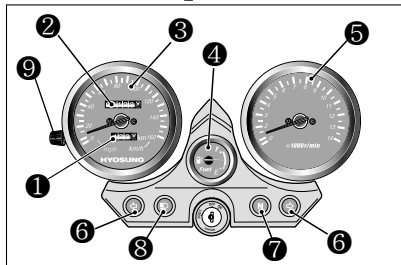

『 *Comet 125* 』

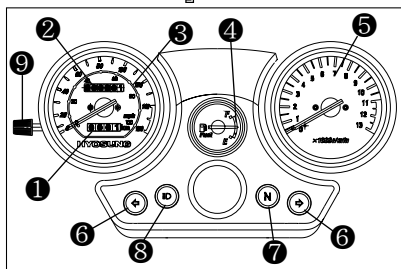

### ① TRIP METER

The trip meter is a resettable odometer located in the speedometer assembly. It can be used to indicate the distance traveled on short trip or between fuel stops. Turning control button ⑨ to clockwise will return the meter to zero.

### ② ODOMETER

The odometer registers the total distance that the motorcycle has been ridden.

### ③ SPEEDOMETER

The speedometer indicates the road speed in kilometers and miles per hour.

### ④ FUEL METER

It indicates the remaining fuel amount in the fuel tank.

The “ F ” (Full) mark indicates the fuel tank is full.

The “ E ” (Empty) mark indicates the fuel tank is empty or nearly so. (the remaining fuel is 2.1ℓ at the “ E ” (Empty) mark, the capacity is 17.0ℓ)

Fill the fuel tank before “ E ” (Empty) mark.

## ⚠ CAUTION

The fuel gauge indicates the remaining amount whenever the ignition switch is “ON” or “OFF”.

For checking the remaining amount of fuel, hold the motorcycle vertically and set the ignition switch “ON”.

### ⑤ TACHOMETER

The tachometer indicates the engine speed in revolutions per minutes (rpm).

### ⑥ TURN SIGNAL INDICATOR LAMP

When the turn signals are being operated either to the right or to the left, the indicator will flash at the same time.

### ⑦ NEUTRAL INDICATOR LAMP

The neutral indicator lamp will come on when the transmission is in neutral.


The lamp will go out when you shift into any gear other than neutral.

### ⑧ HIGH BEAM INDICATOR LAMP


The high beam indicator lamp will come on when the head lamp high beam is turned on.

## LEFT HANDLE SWITCH

「Comet 250 R」 & 「Comet 125 R」

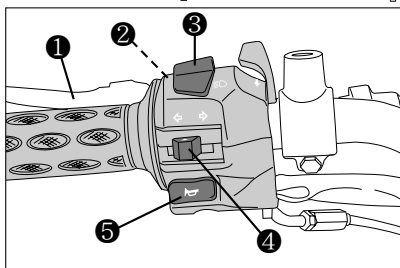

「Comet 250」 & 「Comet 125」

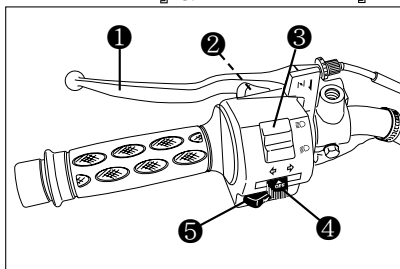

### ① CLUTCH LEVER

 
The clutch lever is used for disengaging the drive to the rear wheel when starting the engine or shifting the transmission gear.

Squeezing the lever disengages the clutch.

### ② “PASS” SWITCH



Press the “PASS” switch to operate the head lamp high beam for using when pass.

## ⚠ CAUTION

Do not operate when the dimmer switch “” position.

### ③ DIMMER SWITCH

  Change direction of head lamp light.



- “” : The head lamp high beam come on.  
The high beam indicator lamp also comes on.
- “” : The head lamp low beam come on.

## ⚠ WARNING

 Set the dimmer switch “” when other vehicle is running in front or against.

### ④ TURN SIGNAL SWITCH

Using when left, right turn or change direction.

- “” Position : Flash the left turn signal lamp.
- “” Position : Flash the right turn signal lamp.

## ⚠ CAUTION


Always use the turn signals when you intend to change lanes or make a turn. Always be sure to turn the turn signal switch to the “OFF” position after completing the turn or lane change.

### ⑤ HORN SWITCH


Press the switch to operate the horn.

## RIGHT HANDLE SWITCH



『Comet 250 R』 & 『Comet 125 R』

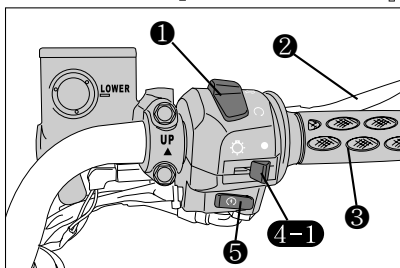


『Comet 250』 & 『Comet 125』

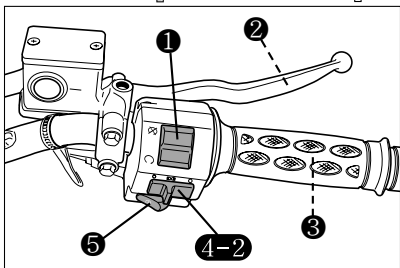

### ① ENGINE STOP SWITCH

  - “” Position : Using when dangerous condition of falling down during drive and others or engine stop suddenly. The ignition circuit is off. The engine cannot start or run.
- “” Position : Using when need operation of engine as drive and others. The ignition circuit is on and the engine can run.

## WARNING

Do not operate for the engine stop switch is in the “” position while driving at one's pleasure.

### ② FRONT BRAKE LEVER

The front brake is applied by squeezing the brake lever gently toward the throttle grip.

Front brake be anxious about motorcycle falling down when braking suddenly as disk brake system. The brake lamp will come on when the lever is squeezed.

## WARNING

Apply the brake lightly and with great care on slippery surfaces to avoid skidding.

### ③ THROTTLE GRIP

 
 
Engine speed is controlled by position of the throttle grip. Turn it toward you to increase engine speed. Turn it away from you to decrease the engine speed.

## WARNING

Avoid turning the throttle grip during brakes.

### ④-1 LIGHT SWITCH

(For 『Comet 250 R』 & 『Comet 125 R』)



- “” position : The head lamp come on.
- “” position : The head lamp go off.

## CAUTION

 『Comet 250 R』 & 『Comet 125 R』 always come on the position lamp, meter lamp, tail lamp and license plate lamp when starting the engine.

#### 4-2 LIGHT SWITCH

(For 『Comet 250』 & 『Comet 125』)

- “” position  
: The head lamp come on.
- “” position  
: The position lamp, meter lamp, tail lamp and license plate lamp come on.  
But, the head lamp not come on.
- “○” position  
: All lamps go off.

#### 5 (S) STARTER SWITCH

Use this switch to operate the starting motor.

With the ignition switch in the “ON” position, the engine stop switch in the “○” position, and the transmission is in neutral, pull in the clutch lever and side stand up and push the starter switch to start the engine.

### CAUTION

**Do not engage the starting motor for more than five seconds at a time as it may overheat the wiring harness and starting motor.**

**If the engine does not start after several attempts, check the fuel supply and ignition system.**

**(Refer for Page 71)**



### WARNING


The 『Comet 250/R』 & 『Comet 125/R』 is equipped with the side stand ignition interlock system.

1. If the transmission is in neutral, you can start the engine regardless of clutch lever and side stand.
2. If the transmission is not in neutral, you can only start the engine with pulling in clutch lever and side stand up.


**Make sure that the side stand ignition interlock system is working properly before riding.**

## CARBURETOR CHOKE LEVER

'Comet 250 R,' & 'Comet 125 R,'

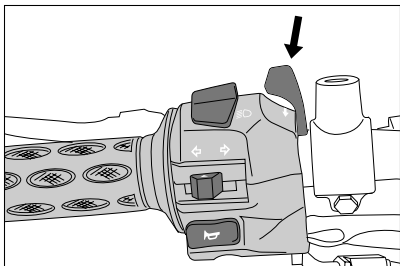

'Comet 250,' & 'Comet 125,'

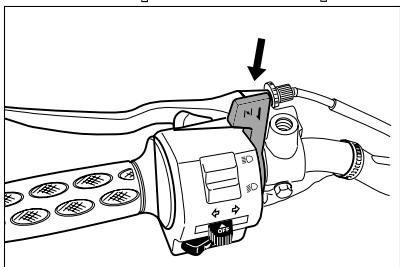

The carburetor is equipped with a choke system to provide easy starting when the engine is cold.

When starting the cold engine, turn the choke lever all the way toward you. The choke works best when the throttle is in the closed position. When the engine is warm, you do not need to use the choke system for starting.


## ⚠ CAUTION

If you keep running in condition of full choke lever, causes fuel excess exhaustion, high speed not to run, it may damage spark plug.

## REAR BRAKE PEDAL

Depressing the rear brake pedal will apply the rear brake.



The brake lamp will be illuminated when the rear brake is operated.

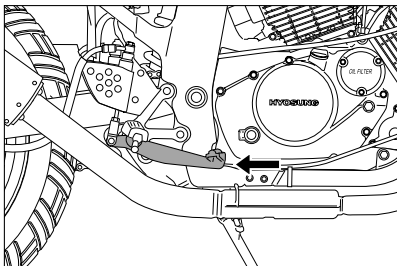

## ⚠ WARNING

Apply the brake lightly and with great care on slippery surfaces to avoid skidding.

## GEARSHIFT LEVER

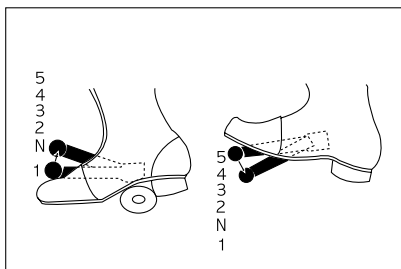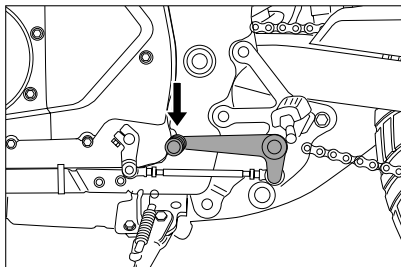

『Comet 250/R』 & 『Comet 125/R』 has a 5-speed transmission which operates as shown.

To shift properly, pull the clutch lever and close the throttle at the same time you operate the gearshift lever. Whenever a gear is selected, the gearshift lever will return to its normal position ready to select the next gear.

Lift the gearshift lever to upshift and depress the lever to downshift.

Neutral is located between first and 2nd gear.

When neutral is desired, depress or lift the lever halfway between first and 2nd gear.

It is not possible to upshift or downshift more than one gear at a time.

When shifting from first to 2nd gear or 2nd gear to low, neutral will be automatically skipped.

Reduce the motorcycle speed before down-shifting.

When down-shifting, the engine speed should be increased before the clutch is engaged.

This will prevent unnecessary wear on the drive train components and the rear tire.

## **⚠ CAUTION**

**When the transmission is in neutral the green indicator lamp on the instrument panel will be lit.**

**However, even though the light is illuminated, cautiously release the clutch lever slowly to determine whether the transmission is positively in neutral.**




## FOOTRESTS


### ⊙ FOOTREST POSITION ADJUSTMENT (FOR 'Comet 250 R' & 'Comet 125 R')

'Comet 250 R' & 'Comet 125 R' have 3 type of the footrest position, right and left.


To change the position, remove the 8mm wrench bolts ①, ② and install the bolts to the desired position by using the hexagon wrench 6mm.

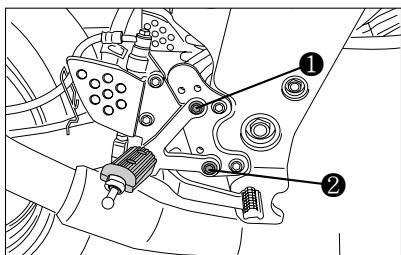

[ POSITION A ]

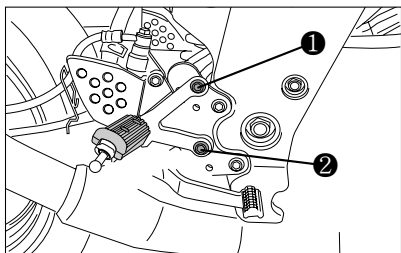

[ POSITION B ]

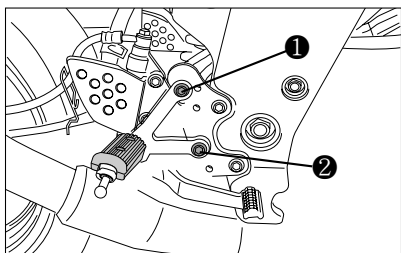

[ POSITION C ]

'Comet 250 R' & 'Comet 125 R' are delivered from the factory on position A.

## ⚠ WARNING

When adjusting the footrest position, the 8mm wrench bolts be torqued to the proper specification.

If they are not, the footrest can come off unexpectedly.


### Tighten Torque


Footrest mounting bolt	2.2 ~ 3.5 kgf · m (22 ~ 35 N · m)
------------------------	--------------------------------------

### ⊙ GEARSHIFT LINK ROD (FOR 'Comet 250 R' & 'Comet 125 R' 's OPTIONAL PARTS)

When the footrests in position C, exchange the gearshift link rod for appropriate riding position.


- Position A or B  
: Install the gearshift link rod ③
- Position C  
: Install the gearshift link rod ④

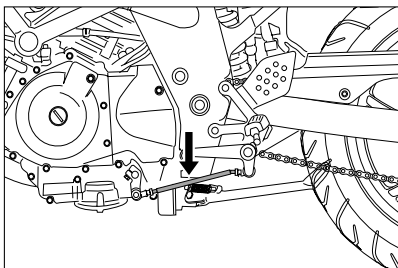

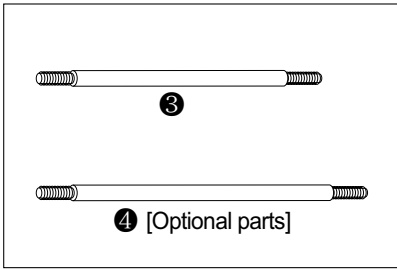

The gearshift link rod ④ is optional parts.

## SIDE STAND

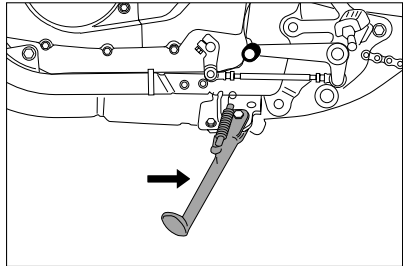

『Comet 250/R』 & 『Comet 125/R』 are equipped with the side stand ignition interlock system.

1. If the transmission is in neutral, you can start the engine regardless of clutch lever and side stand.
2. If the transmission is not in neutral, you can only start the engine with pulling in clutch lever and side stand up.

NO	Neutral switch	Clutch lever	Side stand	Engine start
1	●	△	△	Possible
2	△	●	●	Possible
3	△	●	△	Impossible
4	△	△	●	Impossible

## NOTE


●	On or Up
△	Off or Down



## WARNING

Make sure that the side stand ignition interlock system is working properly before riding.


## SEAT LOCK

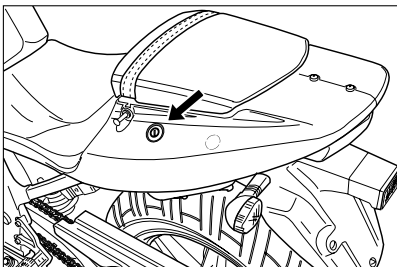

The rear seat lock is located under the left rear seat.

To remove the rear seat, insert the ignition key into the lock and turn it clockwise.


To reinstall the rear seat, slide the seat hook into the seat hook retainer and push down firmly until the seat snaps into the locked position.

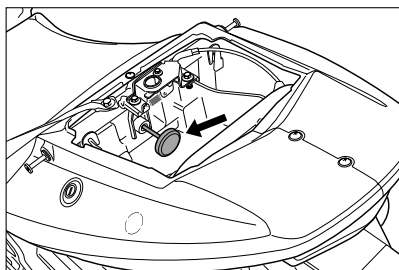

To remove the front seat, pull the knob located under the rear seat.

## TRUNK

A small and light article such as maintenance manual or Owner's manual can be placed under the rear seat.

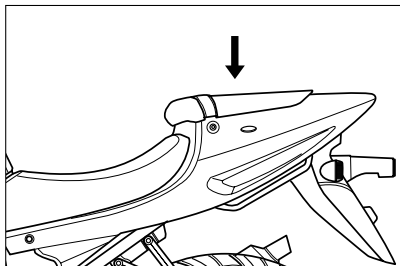


## NOTE

Loading limit of trunk : 1kg ( 2.21lbs)

## ⚠ CAUTION

- The trunk could be heated. Don't keep anything that doesn't endure heat.
- Don't keep the fragile.
- Check if it is locked.
- The unlocking of rear seat could cause serious accident.
- Don't allow water to get inside the trunk or it could damage.
- Don't keep the valuables in the trunk when leaving unattended.

## REAR SHOCK ABSORBER

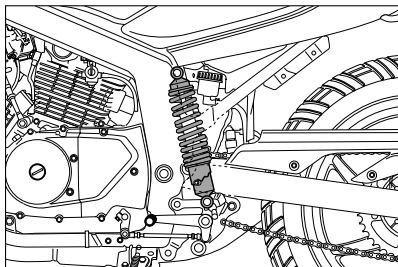

「Comet 250/R」 & 「Comet 125/R」 are delivered from the factory with its adjuster set on position 2.

Adjustment of rear suspension is practicable position 2 to position 1.

## ⚠ WARNING


Don't adjust or ride the rear shock absorber over position 3.

---

## SUPPLY OF GASOLINE AND ENGINE OIL

---

### GASOLINE

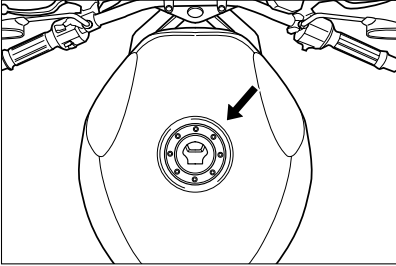

To open the fuel tank cap, insert the ignition key into the lock and turn it clockwise. With the key inserted, lift the cap up with the key.

To close the fuel tank cap, push the cap down firmly with the key in the cap lock.

## **WARNING**

Gasoline is extremely flammable and toxic. Always observe the following precautions when refueling your 『Comet 250/R』 & 『Comet 125/R』.

- Never permit motorcycle refueling by anyone other than an adult.
- Refuel in a well ventilated area.
- Make sure the engine is off and avoid spilling fuel on a hot engine.
- Do not smoke, and make sure there are no open flames or sparks in the area.
- Avoid prolonged contact with skin and breathing of gasoline vapors.
- Keep children and pets away during refueling.

## **WARNING**

Do not overfill the fuel tank. Stop adding fuel when the fuel level reaches the bottom of the filler neck. If you fill the tank beyond this level, fuel may overflow when it expands due to engine heat or heating by the sun.

## ENGINE OIL


Long engine life depends much on the selection of quality oil and the periodic changing of the oil.

Daily oil level checks and periodic changes are two of the most important maintenances to be performed.

### ⊙ ENGINE OIL LEVEL CHECK

Follow the procedure below to inspect the engine oil level.

1. Start the engine and run it for a few minutes.
2. Stop the engine and wait three minutes.
3. Hold the motorcycle vertically and inspect the engine oil level through the engine oil level lens on the right side on the engine.

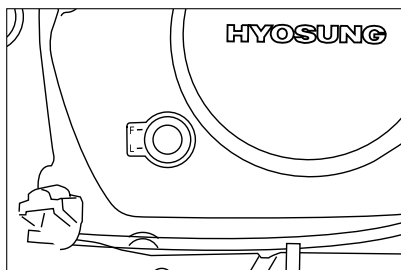

## ⚠ CAUTION

“Fuel and Engine oil” use certainly to recommend at the front part.

## ⚠ CAUTION

Never operate the motorcycle if the engine oil level is below the “Lower line mark (L)” in the engine oil level lens. Never fill the engine oil above the “Upper line mark (F)”. Engine oil level being most suitable about 1mm under the “Upper line mark (F)” of the engine oil level lens. In case of the engine oil pouring excessively, the engine output being made insufficient.

Be careful not to pour the engine oil excessively.

### ⊙ ENGINE OIL AND FILTER CHANGE

Change the engine oil and filter, after first running 1,000km and every running 4,000km.

The oil should always be changed when the engine is hot so that the oil will drain thoroughly from the engine. The procedure is as follows.

### ENGINE OIL CAPACITY

	<i>Comet 250/R</i>	<i>Comet 125/R</i>
Replace	1,450 ml	1,450 ml
Oil filter replace	1,500 ml	1,500 ml
Overhaul	1,800 ml	1,650 ml

## ⚠ CAUTION

In case of the engine oil pouring excessively, the engine output being made insufficient.


Be careful not to pour the engine oil excessively.

1. Place the motorcycle on the jack or block.


## **⚠ CAUTION**

More frequent servicing may be performed on motorcycles that are used under severe conditions, inspect ① Quantity of Engine oil, ② Pollution degree of Engine oil before riding the motorcycle and then supplement and replace at any time to prevent damage of the engine.

2. Remove the engine oil filler cap ①.

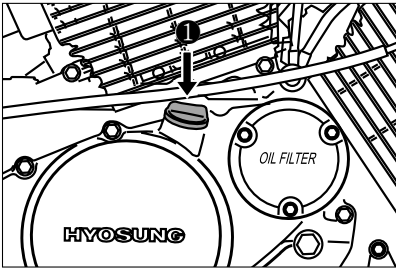


3. Drain the oil by removing the drain plug ② located on the bottom of the engine.


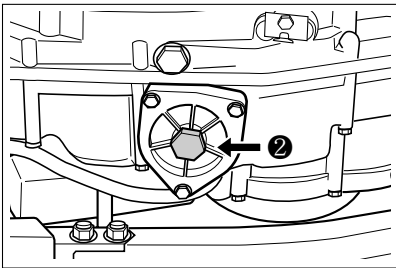


## **⚠ CAUTION**

Necessarily, confirm and clean the oil strainer ④ when replace the Engine oil (specially, when first replacement).

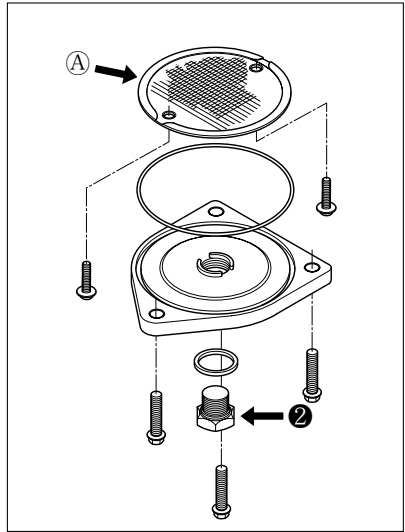

4. Remove the three nuts ③ holding the filter cap ⑥ in place.

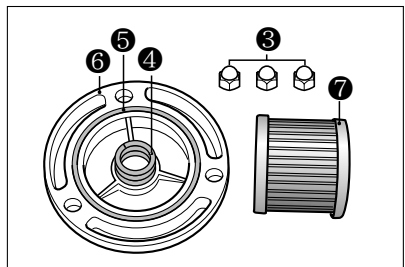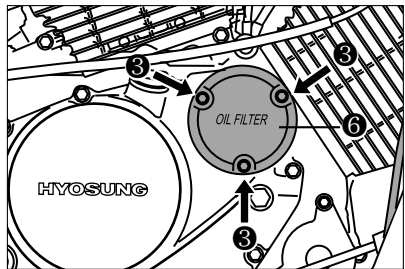


5. Replace the engine oil filter ⑦ with a new one.

### **⚠ CAUTION**

Insert the filter so that surface of the filter hole turn toward the engine.

### ● OIL FILTER INSTALLATION

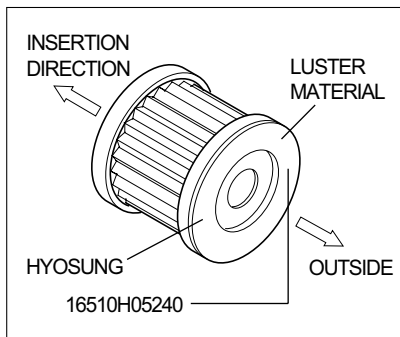

### **⚠ CAUTION**

When install the oil filter, necessarily, "HYOSUNG" character and "16510H05240" part's NO. install toward the outside, otherwise can damage the engine.

### **⚠ WARNING**

Engine oil and exhaust pipes can be hot enough to burn you.

Wait until the oil drain plug and exhaust pipes are cool enough to touch with bare hands before draining oil.

### **⚠ WARNING**

New and used oil and solvent can be hazardous. Children and pets may be harmed by swallowing new or used engine oil or solvent. Continuous contact with used engine oil has been found to cause skin cancer in laboratory animals. Brief contact with used oil or solvent may irritate skin.

- Keep new and used oil and solvent away from children and pets.
- Wear a long-sleeve shirt and waterproof gloves.
- Wash with soap if oil or solvent contact your skin.

6. Before replacing the engine oil filter cover, be sure to check that the engine oil filter spring ④ and the "O" ring ⑤ are installed correctly. Use new "O" ring each time the engine oil filter element is replaced.
7. Replace the oil filter cover and tighten the nuts securely but do not over tighten them.
8. Replace the drain plug and tighten it securely. Pour fresh oil through the filler hole. Approximately 1,500ml of oil will be required.

### **⚠ CAUTION**

Approximately 1,450ml of oil must be required when changing oil only without replacing the oil filter.



## CAUTION

In case of the engine oil pouring excessively, the engine output being made insufficient.

Be careful not to pour engine oil.

9. Operate the engine a few minutes by idling speed.

Inspect to leak oil at the oil filter cap.

10. Confirm the oil level with the oil level lens after waiting about a minute next to stopping the engine.

The oil level is located between the "Lower line (L)" and the "Upper line (F)".

When below the "Lower line (L)", refill the oil between the "Lower line (L)" and the "Upper line (F)".

## RIDING TIPS

### STARTING THE ENGINE

Before attempting to start the engine make sure :

1. The transmission is in neutral.
2. The ignition switch is in the "ON" position.
3. The engine stop switch is in the "○" position.
4. Moving the side stand to the fully upper position.
5. Inspect every day once before riding the motor cycle.

## WARNING

The 『Comet 250 R』 & 『Comet 125 R』 is equipped with the side stand ignition interlock system.

1. If the transmission is in neutral, you can start the engine regardless of clutch lever and side stand.
2. If the transmission is not in neutral, you can only start the engine with pulling in clutch lever and side stand up.

Make sure that the side stand ignition interlock system is working properly before riding.

## CAUTION

『Comet 250 R』 & 『Comet 125 R』 always come on the position lamp, meter lamp, tail lamp and license plate lamp when starting the engine.

⊙ **WHEN THE ENGINE IS COLD :**

1. Turn the carburetor choke lever all the way toward you.
2. Close the throttle grip and push the starter switch.
3. Immediately after the engine starts, return the choke lever halfway and warm up the engine.
4. Return the choke lever all the way to its disengaged position.

⊙ **WHEN THE ENGINE IS WARM :**

1. Open the throttle grip 1/8 ~ 1/4.
2. Push the starter switch.

 **CAUTION**

Operation of the carburetor choke system is not necessary when the engine is warm.

 **WARNING**

Running the engine indoors or in a garage can be hazardous.  
Exhaust gas contains carbon monoxide, a gas that is colorless and odorless and can cause death or severe injury.  
Only run the engine outdoors where there is a fresh air.

 **CAUTION**

Running the engine too long without riding may cause the engine to overheat.  
Overheating can result in damage to internal engine components and discoloration of exhaust pipes.  
Shut the engine off if you cannot begin your ride promptly.

 **CAUTION**

Do not engage the starting motor for more than five seconds at a time as it may overheat the wiring harness and starting motor.

If the engine does not start after several attempts, check the fuel supply and ignition system.

(Refer for Page 71)

## STARTING OFF

### **WARNING**

Riding these motorcycles at excessive speed increases your chances of losing control of the motorcycle.

This may result in an accident.

Always ride within the limits of your skills, your motorcycle, and the riding conditions.

### **WARNING**

Removing your hands from the handlebars or feet from the footrests during operation can be hazardous. If you remove even one hand or foot from the motorcycle, you can reduce your ability to control the motorcycle.

Always keep both hands on the handlebars and both feet on the footrests of your motorcycle during operation.

### **WARNING**

Sudden side winds, which can occur when being passed by large vehicles, at tunnel exits or in hilly areas, can upset your control.

Reduce your speed and be alert to side winds.

Pull the clutch lever in and pause momentarily. Engage first gear by depressing the gearshift lever downward.

Turn the throttle grip toward you and at the same time release the clutch lever gently and smoothly. As the clutch engages, the motorcycle will start moving forward. To shift to the next higher gear, accelerate gently, then close the throttle and pull the clutch lever in simultaneously. Lift the gearshift lever upward to select the next gear and release the clutch lever and open the throttle again.

Select the gears in this manner until fifth gear is reached.

### **WARNING**

Downshifting while the motorcycle is leaned over in a corner may cause rear wheel skid and loss of control.

Reduce your speed and downshift before entering corner.

### **WARNING**

Do not operate for the ignition switch is in the "OFF" or "LOCK" position or the engine stop switch is in the "⊗" position while driving at one's pleasure.

## USING THE TRANSMISSION

The transmission is provided to keep the engine operating smoothly in its normal operating speed range. The gear ratios have been carefully chosen to meet the characteristics of the engine. The rider should always select the most suitable gear for the prevailing conditions.



### WARNING

**Downshifting when engine speed is too high can ;**

- **cause the rear wheel to skid and lose traction due to increased engine braking, resulting in an accident ; or**
- **force the engine to overrev in the lower gear, resulting in engine damage.**

**Reduce speed before downshifting.**

### CAUTION

**Revvng the engine into the red zone can cause severe engine damage.**

**Never allow the engine to rev into the red zone in any gear.**

## RIDING ON HILLS

When climbing steep hills, the motorcycle may begin to slow down and show lack of power. At this point you should shift to a lower gear so that the engine will again be operating in its normal power range. Shift rapidly to prevent the motorcycle from losing momentum.

When riding down a steep hill, the engine may be used for braking by shifting to a lower gear.

Be careful, however, not to allow the engine to overrev.

## STOPPING AND PARKING

1. Turn the throttle grip away from you to close the throttle completely.
2. Apply the front and rear brakes evenly and at the same time.
3. Downshift through the gears as road speed decreases.
4. Select neutral with the clutch lever squeezed towards the grip (disengaged position) just before the motorcycle stops. Neutral position can be confirmed by observing the neutral indicator lamp.

### WARNING

Inexperienced riders tend to underutilize the front brake. This can cause excessive stopping distance and lead to a collision. Using only the front or rear brake can cause skidding and loss of control.

Apply both brakes evenly and at the same time.

### WARNING

Hard braking while turning may cause wheel skid and loss of control.

Brake before you begin to turn.

### WARNING

Hard braking on wet, loose, rough, or other slippery surfaces can cause wheel skid and loss of control.

Brake lightly and with care on slippery or irregular surfaces.

### WARNING

Following another vehicle too closely can lead to a collision. As vehicle speeds increase, stopping distance increases progressively.

Be sure you have a safe stopping distance between you and the vehicle in front of you.

5. Park the motorcycle on a firm, flat surface where it will not fall over.

### WARNING

A hot muffler can burn you. The muffler will be hot enough to burn you for some time after stopping the engine.

Park the motorcycle where pedestrians or children are not likely to touch the muffler.

6. Push down the key to the "OFF" position and turn it to the "LOCK" position after come up again.
7. Remove the ignition key.

---

## BREAK-IN

---

The opening explains how important proper break-in is to achieve maximum life and performance from your new **Hyosung**. The following guidelines explain proper break-in procedures.

### ★ MAXIMUM THROTTLE OPENING RECOMMENDATIONS

The table below shows the maximum throttle opening recommendation during the break-in period.

Initial 800km (500miles)	Less than 1/2 throttle
Up to 1,600km (1,000miles)	Less than 3/4 throttle

### ★ VARY THE ENGINE SPEED

The engine speed should be varied and not held at a constant speed.

This allows the parts to be “loaded” with pressure and then unloaded, allowing the parts to cool.

This aids the mating process of the parts. It is essential that some stress be placed on the engine components during break-in to ensure this mating process.

Do not, though, apply excessive load on the engine.

### ★ BREAKING IN THE NEW TIRES

New tires need proper break-in to assure maximum performance, just as the engine does.

Wear in the tread surface by gradually increasing your cornering lean angles over

the first 160km (100miles) before attempting maximum performance. Avoid hard acceleration, hard cornering, and hard braking for the first 160km (100miles).

## WARNING

**Failure to perform break-in of the tires could cause tire slip and loss of control. Use extra care when riding on new tire. Perform proper break-in of the tire as described in this section and avoid hard acceleration, hard cornering, and hard braking for the first 160km (100miles).**

### ★ ALLOW THE ENGINE OIL TO CIRCULATE BEFORE RIDING

Allow sufficient idling time after warm or cold engine start up before applying load or revving the engine. This allows time for the lubricating oil to reach all critical engine components.

### ★ OBSERVE YOUR FIRST, AND MOST 1,000km SERVICE

The 1,000km (600miles) service is the most important service your motorcycle will receive.

During break-in procedures all of the engine components will have worn in and all of the other parts will have seated in.

All adjustments will be restored, all fasteners will be tightened, and the dirty engine oil and engine oil filter will be replaced.

Timely performance of the 1,000km (600miles) service will ensure optimum service life and performance from the engine.

 **CAUTION**

Service should may be performed before 1,000km (600miles) on motorcycle that are used under severe conditions.

 **CAUTION**

The 1,000km (600miles) service should be performed as outlined in the INSPECTION AND MAINTENANCE section of this Owner's Manual. Pay particular attention to the 「CAUTION」 and 「WARNING」 in that section.

## INSPECTION BEFORE RIDING

Before riding the motorcycle, be sure to check the following item.

Inspect every day once them before riding the motorcycle.

WHAT TO CHECK	CHECK FOR :
Steering	<ul style="list-style-type: none"> <li>● Smoothness</li> <li>● No restriction of movement</li> <li>● No play or looseness</li> </ul>
Throttle	<ul style="list-style-type: none"> <li>● Correct play in the throttle cable</li> <li>● Smooth operation and positive return of the throttle grip to the closed position</li> </ul>
Clutch	<ul style="list-style-type: none"> <li>● Correct lever play</li> <li>● Smooth and progressive action</li> </ul>
Brakes	<ul style="list-style-type: none"> <li>● Fluid level in the reservoir to be above "LOWER" line</li> <li>● Correct pedal and lever play</li> <li>● No "sponginess"</li> <li>● No fluid leakage</li> <li>● Brake pads not to be worn down to the limit line</li> </ul>
Suspension	Smooth movement
Fuel	Enough fuel for the planned distance of operation
Drive chain	<ul style="list-style-type: none"> <li>● Correct tension or slack</li> <li>● Adequate lubrication</li> <li>● No excessive wear or damage</li> </ul>
Tires	<ul style="list-style-type: none"> <li>● Correct pressure</li> <li>● Adequate tread depth</li> <li>● No cracks or cuts</li> </ul>
Engine oil	Correct level and pollution degree of engine oil
Lighting	Operation of all lamps and indicators
Horn	Correct function
Engine stop switch	Correct function
Side stand / Ignition interlock switch	Proper operation



---

## PERIODIC MAINTENANCE

---

The chart indicates the intervals between periodic service in kilometers.

At the end of each interval, be sure to inspect, check, lubricate and service as instructed.

If your motorcycle is used under high stress conditions such as continuous full throttle operation, or is operated in a dusty climate, certain services should be performed more often to ensure reliability of the machine as explained in the maintenance section.

Your **Hyosung** dealer can provide you with further guide lines.

Steering components, suspensions and require very special and careful servicing. For maximum safety we suggest that you have these items inspected and serviced by your authorized **Hyosung** dealer or a qualified service mechanic.

### ⊙ LUBRICATION POINTS

Proper lubrication is important for smooth and long life of each working part of your motorcycle and also for safe riding. It is a good practice to lubricate the motorcycle after a long rough ride or after it gets wet in the rain or after washing it.

Major lubrication points are indicated as follows.



### WARNING



**Improper maintenance or failure to perform recommended maintenance increases the chance of an accident or motorcycle damage.**



### CAUTION

**Using poor quality replacement parts can cause your motorcycle to wear more quickly and may shorten its useful life.**

**Use only genuine Hyosung replacement parts or their equivalent.**

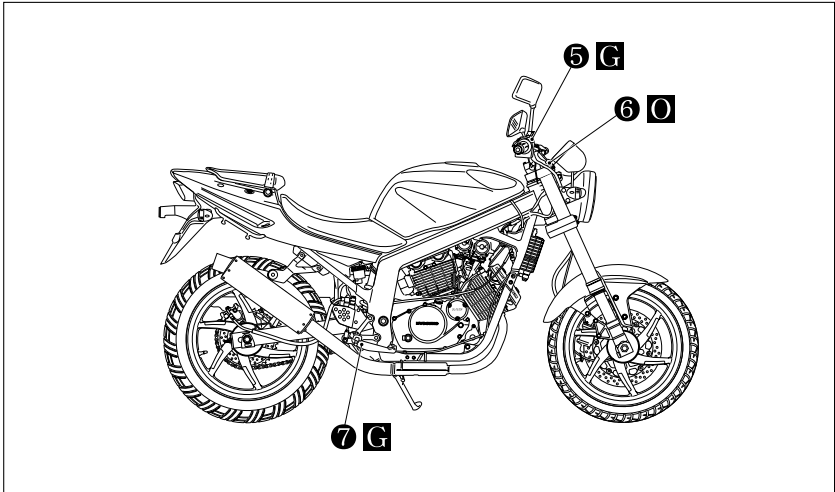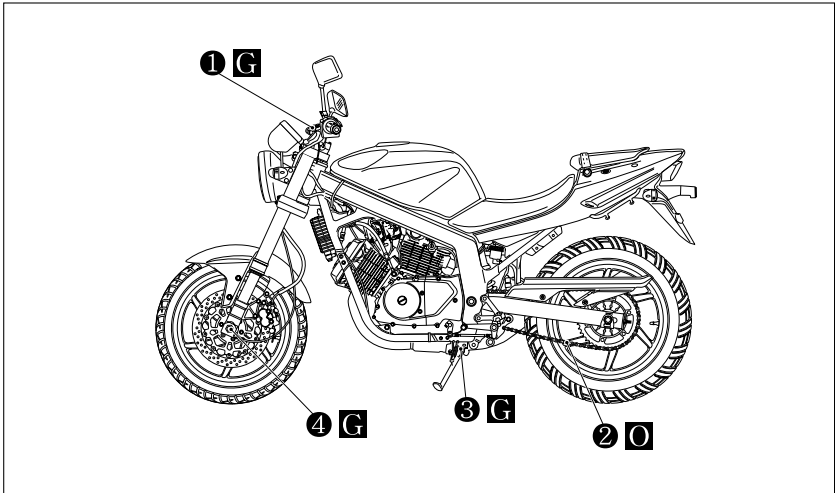

- ① Clutch lever holder
- ② Drive chain
- ③ Side stand pivot and spring hook
- ④ Speedometer gear box

- ⑤ Brake lever holder
- ⑥ Throttle cable
- ⑦ Brake pedal pivot

**O** - Motor oil    **G** - Grease

## ⊙ ENGINE

Item \ Interval	First 1,000 km	Every 4,000 km	Every 8,000 km
Air cleaner element	Clean every 3,000 km · Replace every 12,000 km		
Exhaust pipe bolts and muffler mounting bolts ★	Tighten	Tighten	—
Valve clearance adjust ★	Inspect	Inspect	—
Cylinder head nut ★	Tighten	Tighten	—
Cylinder head & Cylinder ★	—	—	Remove carbon
Spark plug	Clean	Clean	Replace
Fuel hose	Inspect	Inspect	—
	Replace every 4 years		
Engine oil filter	Replace	Replace	—
Engine oil	Replace	Replace	—
Throttle cable	Inspect	Inspect	—
Idle speed ★	Inspect	Inspect	—
Clutch ★	Inspect	Inspect	—

## ⊙ CHASSIS

Item \ Interval	First 1,000 km	Every 4,000 km	Every 8,000 km
Drive chain ★	Clean and lubricate every 1,000 km		
Brake ★	Inspect	Inspect	—
Brake hose ★	Inspect	Inspect	—
	Replace every 4 years		
Brake fluid ★	Inspect	Inspect	—
	Replace every 2 years		
Tire	Inspect	Inspect	—
Steering ★	Inspect	Inspect	—
Front forks ★	—	Inspect	—
Rear shock absorber ★	—	Inspect	—
Chassis nuts and bolts ★	Tighten	Tighten	—

# N O T E


★ = Ask your Hyosung dealer or qualified mechanic to do the maintenance items marked.

## INSPECTION AND MAINTENANCE

### TOOL

To assist you in the performance of periodic maintenance, a tool kit is supplied and is located under the front seat. The tool kit consists of the following items.

NO.	NAME
1	Tool bag
2	10 × 12 mm open end wrench
3	Spark plug wrench
4	Combination screw driver
5	Screw driver handle

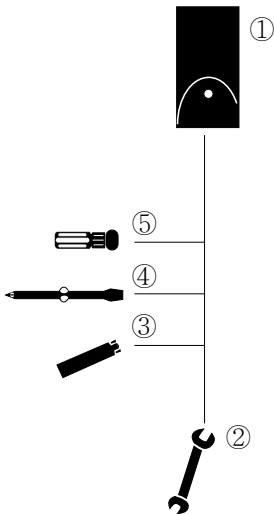

### ENGINE OIL

Check if there is leakage from crankcase, oil hose.

### FUEL HOSE

Inspect the fuel hose for damage and fuel leakage. If any defect are found the fuel hose must be replaced.

Replace the fuel hose every 4 years.

### GASOLINE

Check if there is leakage from fuel tank, fuel pump, fule cock, hose, carburetor.

### RUBBER CAP OF CABLES

Mop them up with a patch when washing.

### EXHAUST PIPE AND MUFFLER

Inspect the exhaust pipe and muffler joint for loosening.

## FRONT FORK

- Check if there is any noise by bend of front fork while moving the handle upward and downward.
- Inspect whether the steering stem is well assembled while moving front fork up/downwards and /or forward/backward.

## REAR SHOCK ABSORBER

Inspect the rear shock absorber for oil leakage and spring condition.

## BATTERY

### ⊙ INSPECTION OF BATTERY SOLUTION LEVEL

MF(Maintenance Free) battery of airtight type is used for these motorcycles.

It is not necessary to inspect or supplement battery fluid.

The battery is located behind the front seat.

However, have your dealer check the charging condition of battery periodically.


## CAUTION

- Do not remove absolutely airtight cover as airtight type battery.
- Keep after separate at the motorcycle for the minimum of self electric discharge and electric leakage when don't use for a long time.
- Remove the (-) negative terminal when keep intact at the motorcycle.

## ⊙ CLEAN OF BATTERY TERMINAL

Clean the battery terminal when it is dusty or rusted.

1. Set the ignition switch "OFF" position.
2. Disassemble the front seat, disassemble the (+) positive battery wire after the (-) negative battery wire. Remove the battery.
3. Clean the terminal.  
If there is white dust, clean it with warm water.
4. Assemble the battery wires and grease the terminal lightly.

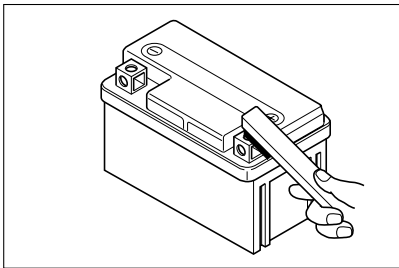

## ⚠ CAUTION

- Keep the battery away from fires.
- When disassemble the battery wire, take off ⊖ terminal first with the ignition switch "OFF" position. When assemble, ⊕ terminal first.
- Fasten certainly the battery wires.
- Incorrect installation of the battery will reverse the terminal position resulting in possible electrical system damage due to incorrect battery lead connection.
- Never charge a battery while still in the machine as damage may result to the battery or regulator/rectifier.

## AIR CLEANER


If the air cleaner element has become clogged with dust, intake resistance will increase with a resultant decrease in power output and an increase in fuel consumption. If riding under severe conditions must be cleaned or replaced more frequently than maintenance schedule. Check and clean the air cleaner element periodically according to the following procedure.

## ⚠ CAUTION

**If the air cleaner element is polluted, will occur to starting go out, output insufficiency, combustion efficiency decline, and sooty smoke (black smoke).**

**This appearance is occurred at first to clean the air cleaner element and confirm.**

1. The air cleaner is located under the fuel tank.  
Remove the fuel tank.
2. Remove the four screw ①.
3. Pull up the air cleaner element ②.

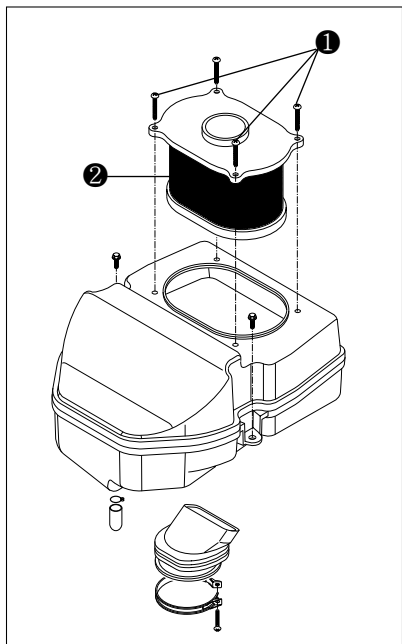

4. Clean the air cleaner element for the following :

- 1) When the air cleaner element clean with the air gun, necessarily blow at the inside by compressed air.
- 2) Carefully examine the air cleaner element for tears during cleaning. Replace it with a new one if it is torn.
- 3) Assemble the element completely or damage severely the engine.
- 4) Be careful not to allow water to go inside the air cleaner element.

### **⚠ CAUTION**

- Assemble the element completely or damage severely the engine.
- Be careful not to allow water to go inside the air cleaner element.

### **⚠ CAUTION**

Before and during the cleaning operation, inspect the element for tears. A torn element must be replaced.

Be sure position the element snugly and correctly, so that no incoming air will bypass it.

Remember, rapid wear of piston rings and cylinder bore is often caused by a defective or poorly fitted element.

### **⚠ CAUTION**


- When the assembly of air cleaner element is not completely done, dusts can go inside and damage severely engine.

- Be careful not to allow water to go into the element while washing.

### **⚠ CAUTION**


More frequent servicing may be performed on motorcycles that are used under severe conditions, also clean the air cleaner element when replacing the oil to prevent damage of the engine.

## ⊕ AIR CLEANER OIL DRAIN PLUG

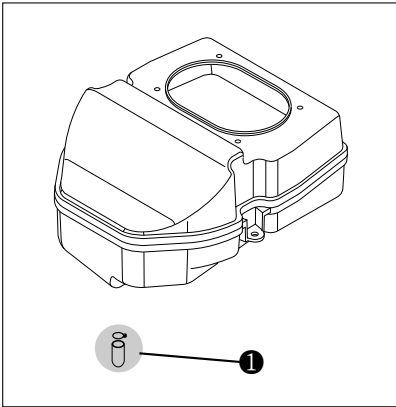

Inspect the plug ① and drain water and oil at the periodic maintenance interval.

The air cleaner oil drain plug ① is located beneath the air cleaner case.

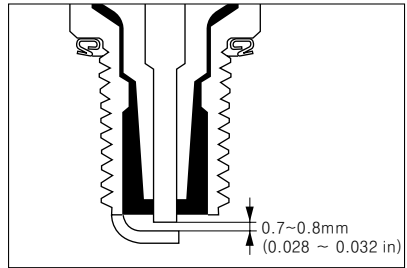


Readjust the spark plug gap to 0.7~0.8mm (0.028 ~ 0.032 in) by using a spark plug gap thickness gauge.

## PLUG REPLACEMENT GUIDE

Hotter type	CR7E
Standard type	CR8E
Colder type	CR9E

## SPARK PLUG

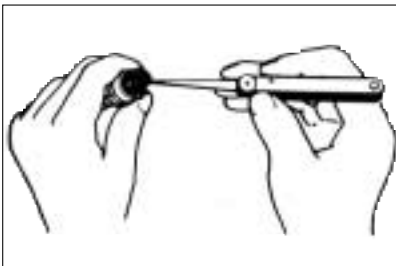

Remove the carbon deposits periodically from the spark plug with a piece of hard wire or pin.

## ⚠ CAUTION

- Do not over torque or cross thread the spark plug or the aluminum threads of the cylinder head will be damaged.

Do not allow contaminants to enter the engine through the spark plug holes when the plug is removed.

- The standard spark plug for these motorcycles has been carefully selected to meet the vast majority of all operational ranges. If the spark plug color indicates that other than a standard spark plug be used, it is best to consult your **Hyosung** dealer before selecting an alternate plug or heat range. The selection of an improper spark plug can lead to severe engine damage.



## CARBURETOR

「Comet 250/R」 & 「Comet 125/R」 equipped one set of composed the two carburetors for efficiency increase of the two cylinder.

The carburetor is factory setting for the best carburation.


Do not attempt to alter its setting.

There are two items of adjustment, however, under your care : engine idle speed and throttle cable play.


### ⚠ CAUTION

Never adjust "CO adjust screw" ① of carburetor.


If adjust optionally, exert a bad influence upon output of the engine as the two carburetor is disharmonious.

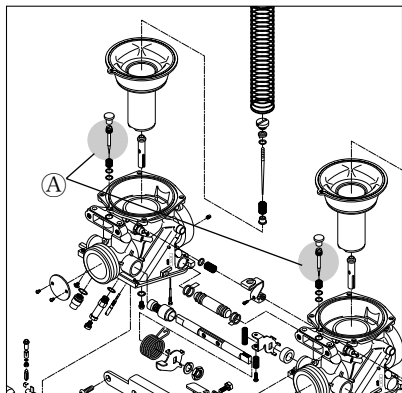

### ⊙ IDLING SPEED

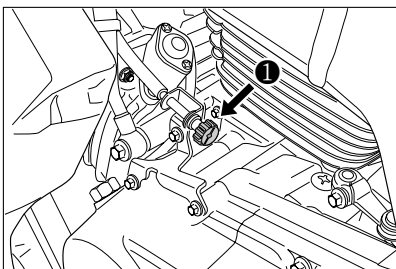

「Comet 250 R」 & 「Comet 125 R」

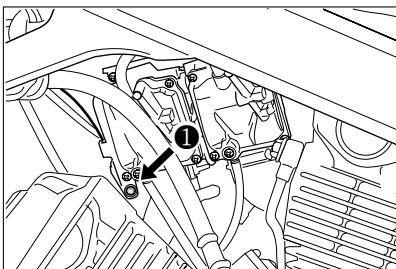

「Comet 250」 & 「Comet 125」


Start up the engine and let the engine run until it warms up fully.

After engine has warmed up, turn the throttle stop screw ① in or out so that the engine may run at 1,400~1,500 RPM.

### ⚠ CAUTION

The engine idle speed should be adjusted with the engine fully warm.

## ⊙ THROTTLE CABLE ADJUSTMENT

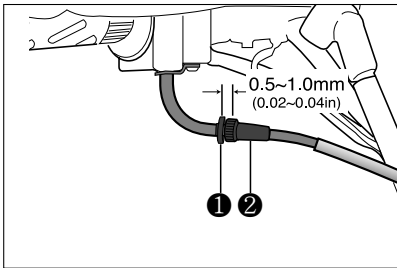

- (1) Loosen the lock nut ①.
- (2) Adjust the cable slack by cable adjuster ② in or out to obtain the correct slack 0.5~1.0mm (0.02~0.04in).
- (3) After adjusting the slack, tighten the lock nut ①.

### WARNING

Inadequate throttle cable play can cause engine speed to rise suddenly when you turn the throttle grip. This can lead to loss of rider control.

Adjust the throttle cable play so that engine idle speed does not rise due to throttle grip movement.



### CAUTION

After completing throttle cable adjustment, check that handlebar movement does not raise the engine idle speed and that the throttle grip return smoothly and automatically.

## CLUTCH CABLE

At each maintenance interval, adjust the clutch cable play by means of clutch cable adjuster.

The cable play should be 4mm (0.16in) as measured at the clutch lever holder before the clutch begins to disengage.

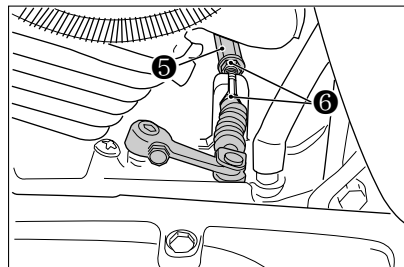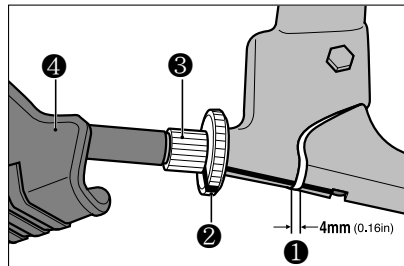

- ① The clutch lever play
- ② The lock nut
- ③ The clutch lever adjuster
- ④ The rubber boot
- ⑤ The cable adjuster
- ⑥ The clutch cable adjuster lock nut

If you find the play of the clutch incorrect, adjust it in the following way :

## ⊕ CLUTCH CABLE ADJUSTMENT

- A basis adjustment be allowed by the clutch lever adjuster ③.
- Loosen the lock nut ② counter-clockwise.
- Turn the clutch lever adjuster ③ in or out to acquire the specified play.
- After end of adjustment, tighten the lock nut ② clockwise fully and cover the rubber boot ④.
- If not adjust by the adjuster ③, loosen the clutch cable adjuster lock nut ⑥.
- Turn the clutch cable adjuster ⑤ in or out to acquire the specified play.
- After end of adjustment, tighten the lock nut ⑥.
- The clutch cable should be lubricated with a light weight oil whenever it is adjusted.

**Clutch cable play ①**

4 mm (0.16 in)

## DRIVE CHAIN

The chain may require more frequent adjustment that it is with periodic maintenance depending upon your riding conditions.

Check the chain every 1,000km.

### **WARNING**

**Riding with the chain in poor condition or improperly adjusted can lead to an accident.**

**Inspect, adjust, and maintain the chain properly before each ride, according to this section.**

## ⊕ INSPECTING THE DRIVE CHAIN



When inspecting the chain, look for the following :

- Loose pins
- Damaged rollers
- Dry or rusted links
- Missing O-ring seals
- Kinked or binding links
- Excessive wear
- Improper chain adjustment

If you find something wrong with the drive chain condition or adjustment, correct the problem if you know how. If necessary, consult your authorized **Hyosung** dealer.

Damage to the drive chain means that the sprockets may also be damaged. Inspect the sprockets for the following :

- Excessively worn teeth
- Broken or damaged teeth
- Loose sprocket mounting nuts

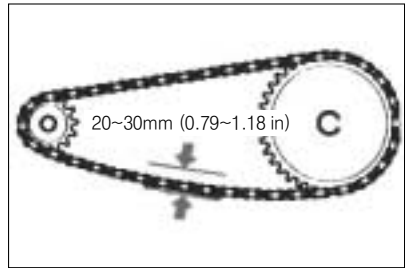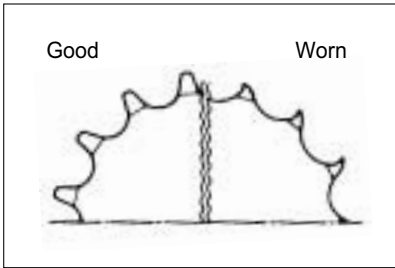

If you find any of these problems with your sprocket, consult your **Hyosung** dealer.


## ⚠ CAUTION

The two sprockets should be inspected for wear when a new chain is installed and replace them if necessary.

## ⊙ DRIVE CHAIN ADJUSTMENT

Adjust the drive chain slack to the proper specification. The chain may require more frequent adjustments than periodic maintenance schedule depending upon your riding conditions.

Chain adjust in the following way.

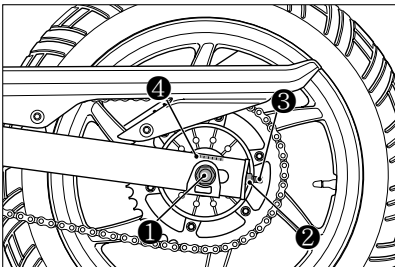

1. Place the motorcycle on the jack or block.
2. Loosen the axle nut ①.
3. Adjust the slack in the drive chain by adjuster ③ as the lock nut ② turning toward the left and right.
4. For alignment of the rear sprocket and the front sprocket, there are reference mark ④ on the same position, right and left.

After aligning and adjusting the slack in the drive chain to 20~30mm (0.79~1.18 in), retighten the axle nut securely and perform a final inspection.

## ⚠ CAUTION

The drive chain for these motorcycles is made of the special material.

The chain should be replaced with a 520HO for 『Comet 250/R』 and 428SO for 『Comet 125/R』.

Use of another chain may lead to premature chain failure.

## ⚠ CAUTION

The drive chain should be inspected every time before riding.

Excessive chain slack could cause the chain to come off the sprockets and result in accident or serious engine damage.



## WARNING

Be careful not to touch the muffler when it is hot : a hot muffler can burn you.

### Ⓞ DRIVE CHAIN CLEANING AND OILING

This drive chain has special "O rings".

Clean and oil the chain periodically, as follows :

1. Clean the chain with kerosene. If the chain tends to rust, the interval must be shortened. Kerosene is a petroleum product and will provide some lubrication as well as cleaning action.



## WARNING

Kerosene can be hazardous. Kerosene is flammable. Children or pets may be harmed from contact with kerosene.

Keep flames and smoking materials away from kerosene. Keep children and pets away from kerosene.

If swallowed, do induce vomiting. Call a physician immediately.

Dispose of used kerosene properly.



## CAUTION

Cleaning the chain with gasoline or commercial cleaning solvents can damage "O rings" and ruin the chain.

Clean the drive chain with kerosene only.

2. After thoroughly washing the chain and allowing it to dry, oil the links with a **Hyosung** chain lube or an equivalent.



## CAUTION

Some drive chain lubricants contain solvents and additives which could damage the "O rings" in your chain.

Use **Hyosung** chain lube or an equivalent that is specifically intended for use with "O rings" chains.

## BRAKES

『Comet 250/R』 & 『Comet 125/R』 utilize front and rear disk brakes.

Properly operating the brake systems are vital to safe riding. Be sure to perform the brake inspection requirements as schedules.


The brakes should be inspected at periodic inspection by your authorized Hyosung dealer.

### ⊙ BRAKE FLUID


Be sure to check the brake fluid level in the master cylinder. If the level was found to be lower than the lower mark while holding the motorcycle upright, replenish with the proper brake fluid that meets Hyosung's requirements.

As the brake pads wear, the fluid level will drop to compensate for the new position of brake pads.

Replenishing the master cylinder to considered normal periodic maintenance.

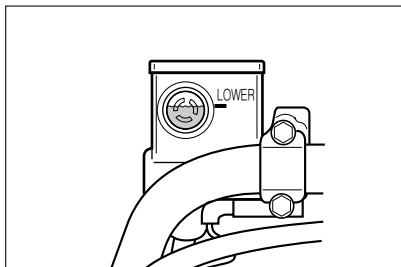

[Front Brake]

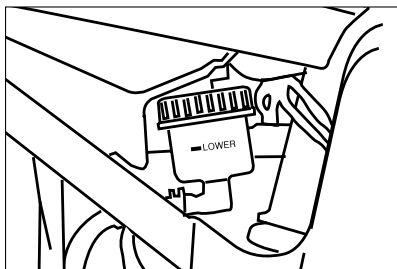

[Rear Brake]

### ⚠ WARNING

Brake fluid may be harmful if swallowed or if it comes in contact with skin or eyes. Contact your doctor immediately if brake fluid is swallowed and induce vomiting. If brake fluid gets into the eyes or in contact with the skin, flush thoroughly with plenty of water.

### ⚠ CAUTION


These motorcycles uses glycol-based brake fluid. Do not use or mix different types of brake fluid such as silicone-based or petroleum-based fluid, otherwise serious damage will result in the brake system.

Use only DOT3 or DOT4. Do not spill any brake fluid on painted or plastic surfaces as it will damage the surface severely.


Never use any brake fluid that has been stored in a used or unsealed container. Never reuse brake fluid left over from the last servicing and stored for long period as it absorbs moisture from the air.

## ⊙ BRAKE PADS


Inspect the front brake pads by nothing whether or not the friction pads are worn down to the grooved limit line. If a pad is worn to the grooved limit line it must be replaced with a new one by your authorized Hyosung dealer or qualified service mechanic.

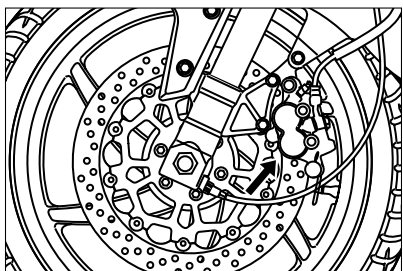

[Front Brake]

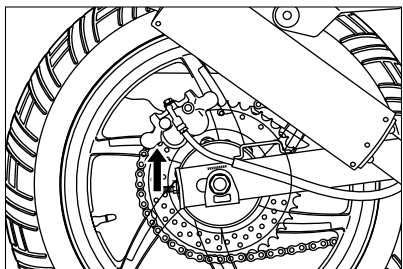

[Rear Brake]

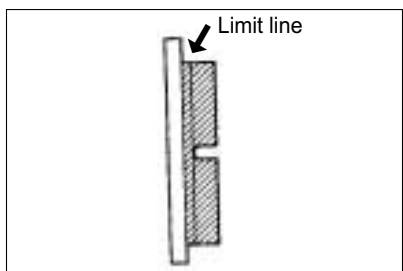

Inspect every day in the following point at the brake system.

- ① Brake fluid leak of the front and rear brake system.
- ② Leak or damage of the brake hose.
- ③ Operating of the brake lever and pedal.
- ④ Wear of the front and rear brake pads.

## ⚠ CAUTION

The front and rear brake system be replaced the brake hose or the brake fluid according to periodic inspection chart by your authorized Hyosung dealer for safety as in times of operating at high pressure.

## ⚠ WARNING

Riding with worn brake pads will reduce braking performance and will increase your chance of having accident. Inspect brake pad wear before each use. Ask your Hyosung dealer or qualified mechanic to replace brake pads if any pad is worn to the limit.

## ⚠ CAUTION

After replaced the front brake pads, the brake lever and pedal pull and release several times so that it is setting at the original place.

Then, do not ride the motorcycle until operating the brake fluid and becoming the brake distance.

### ⊙ BRAKE DISK INSPECTION

Check the brake disk for damage or cracks.

### ⊙ FRONT BRAKE FLUID SUPPLY

1. Place the motorcycle on a level surface and keep the handlebars straight.
2. Clean the brake fluid reservoir around not to allow dust to get inside of it.
3. Loosen the screw and open the cap.
4. Replenish with brake fluid to the upper line.

## ⚠ CAUTION

Do not spill any brake fluid on painted or plastic surfaces as it will damage the surface severely.

## N O T E

The recommended brake fluid  
: DOT3 or DOT4

5. Fasten the cap.

### ⊙ REAR BRAKE FLUID SUPPLY

1. Place the motorcycle on a level surface and keep the handlebars straight.
2. Clean the brake fluid reservoir around not to allow dust to get inside of it.
3. Turn the cap to the counter - clockwise.
4. Replenish with brake fluid to the upper line.

## N O T E

The recommended brake fluid  
: DOT3 or DOT4

5. Fasten the cap.

### ⊙ FRONT BRAKE LAMP SWITCH

The front brake lamp switch is located beneath the front brake lever. Loosen the switch fitting screws and adjust the timing by moving the switch body forward or backward.

### ⊙ REAL BRAKE LAMP SWITCH

The rear brake lamp switch is located at right-side of the engine.

Move the switch up or down to adjust it until the switch operates and turns on the brake lamp after the brake pedal begins to be depressed.



## TIRE

Inspect the tire pressure and the tire thread depth periodically.

Inspect frequently the tire pressure for the safety and the tire life.


### WARNING

Failure to follow these warnings may result in an accident due to tire failure. The tires on your motorcycle form the crucial link between your motorcycle and the road.

Follow these instructions ;

- Check tire condition and pressure, and adjust pressure before each ride.
- Avoid overloading your motorcycle.
- Replace a tire when worn to the specified limit, or if you find damage such as cuts or cracks.
- Always use the size and type of tires specified in this owner's manual.

TIRE PRESSURE (COLD INFLATION)	NORMAL RIDING	
	SOLO RIDING	DUAL RIDING
FRONT	2.00 kg/cm <sup>2</sup>	2.00 kg/cm <sup>2</sup>
	200 kpa	200 kpa
	29.0 psi	29.0 psi
REAR	2.25 kg/cm <sup>2</sup>	2.50kg/cm <sup>2</sup>
	225 kpa	250 kpa
	32.0 psi	36.0 psi

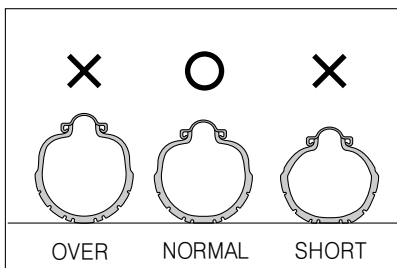

### CAUTION

If there are some problem with the tire pressure or cracks and cuts, it will decrease the riding stability and lead to flat tire.

### ⊙ TIRE PRESSURE

Insufficient air pressure in the tires not only hasten tire wear but also seriously affects the stability of the motorcycle.

Under-inflated tires make smooth cornering difficult and over-inflated tires decrease the amount of tire in contact with the ground which can lead to skids and loss of control. Be sure that the tire pressure is within the specified limits at all times.


Tire pressure should only be adjusted when the tire is cold.

If you see the problem with the tire, adjust the pressure with the pressure gauge.


### ⊙ CRACKS AND CUTS

Check if

- 1) there are visible cracks and cuts.
- 2) there are pebbles stuck.

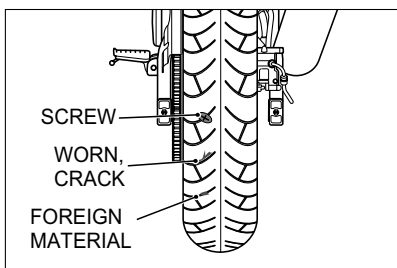

## ⊙ TIRE TREAD CONDITION

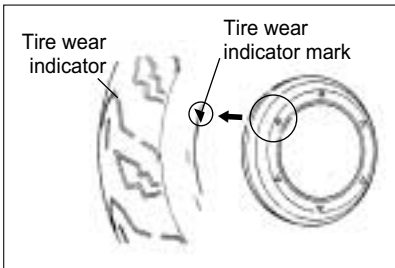

Operating the motorcycle with excessively worn tire will decrease riding stability and can lead to loss of control.

Inspect storage of tire thread's depth by the 『tire wear indicator』.

Replace the front and rear tires at once when appear the 『tire wear indicator』.

### ▲ CAUTION

The standard tire on 『Comet 250/R』 & 『Comet 125/R』 are 110/70-17 54H for front, and 150/70-17 69H for rear.  
The use of a tire other than standard may cause trouble.  
It is highly recommended to use the standard tire supplied by Hyosung.


## ⊙ REAR AXLE NUT

Inspect the rear axle shaft and jointing nut for loosening.

## ⊙ TIRE REPLACEMENT

### ● FRONT TIRE REPLACEMENT

1. Place the motorcycle on the jack or block.

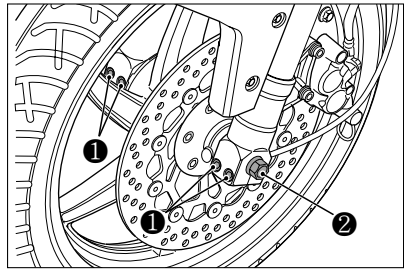

2. Loosen the four front axle pinch bolt ① (right and left).
3. Loosen the front axle ②.
4. Carefully position a jack or block under engine and raise until the front wheel is slightly off the ground.

### ▲ CAUTION


Improper jacking may cause damage to the oil filter.

Do not apply the jack head to the oil filter when jacking up the motorcycle.

5. Draw out the axle shaft.
6. Slide the front wheel forward.
7. To reinstall the wheel assembly, reverse the sequence as described.

### ● REAR TIRE REPLACEMENT

1. Place the motorcycle on the jack or block.

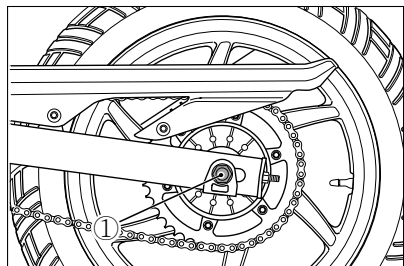

2. Loosen the rear axle ①.
3. Carefully position a jack or block under engine and raise until the rear wheel is slightly off the ground.



## WARNING

**A hot muffler can burn you.  
The muffler will be hot enough to burn you for some time after stopping the engine.  
Wait until the muffler cools to avoid burns.**

4. Draw out the rear axle shaft.
5. Pull the rear wheel assembly rear ward.
6. To replace the wheel, reverse the complete sequence listed.

## REPLACEMENT OF THE LAMP

Requirement electric power of the lamp shown in the following chart.

When replace the damaged lamp, always use the equal capacity.

The use of a lamp other than rules may cause to excessive at the electric system or to damage the lamp.

『Comet 250 R』 & 『Comet 125 R』


NAMES		CAPACITY
Head lamp	HI	12V - H1 : 55W × 1
	LO	12V - H3 : 55W × 1
Brake / Tail lamp		12V - 21 / 5W × 1
Turn signal lamp		12V - 10W × 4
License plate lamp		12V - 5W × 1

『Comet 250』 & 『Comet 125』

NAMES		CAPACITY
Head lamp	HI	12V - H4 : 60W × 1
	LO	12V - H4 : 55W × 1
Brake / Tail lamp		12V - 21 / 5W × 1
Turn signal lamp		12V - 10W × 4
License plate lamp		12V - 5W × 1

## ⊙ HEAD LAMP


( *Comet 250 R* & *Comet 125 R* )

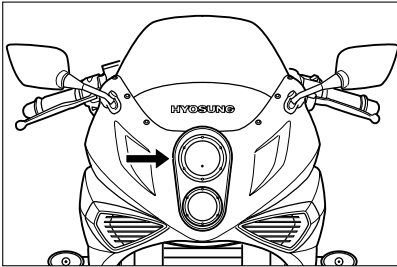


We suggest that you have 「*Comet 250 R*」 & 「*Comet 125 R*」's head lamp bulb replaced by your authorized **Hyosung** dealer or a qualified service machanic.

## ⊙ HEAD LAMP

( *Comet 250* & *Comet 125* )

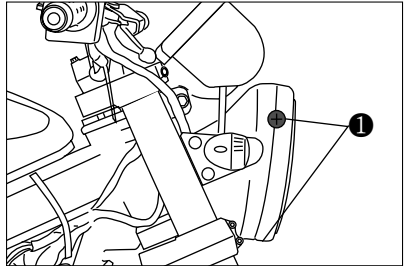

1. Remove the three screw ① (right, left and bottom) and the head lamp assembly.

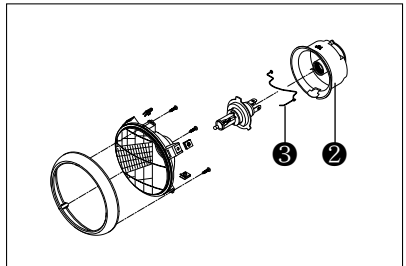


2. Disconnect the head lamp coupler.
3. Remove the dust cover ② and socket spring ③.
4. After removing the bulb at the socket, replace the new bulb.
5. To install the head lamp, reverse the above sequence.

## ⚠ CAUTION

The use of a lamp other than rules may cause to occur the vehicle fire and to damage electric parts.  
Surely use only the lamp of proper capacity.

## ⊙ TURN SIGNAL LAMP

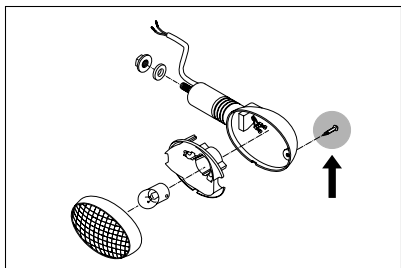


1. Remove the lens by removing the screw.
2. Push the bulb, turn it to the counter-clockwise, and pull it out.
3. After stick in the new bulb, assemble the lens.


### **⚠ CAUTION**

Overtightening the screws may cause the lens to crack.

## ⊙ TAIL / BRAKE LAMP

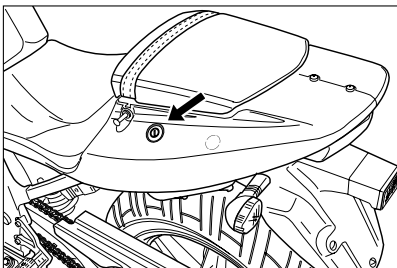


1. Remove the rear seat.  
To remove the rear seat, insert the ignition key into the lock and turn it clockwise.

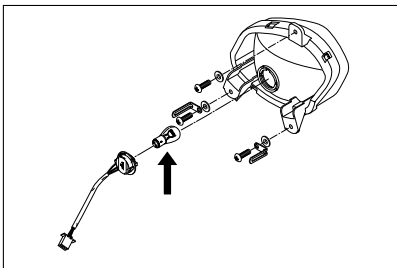



2. Turn the socket to the counter-clockwise and pull it out at the lamp housing.
3. Push the bulb, turn it to the counter-clockwise, and pull it out.
4. To fit the replacement of bulb, push it in and turn it to the clockwise while pushing.

## ⦿ LICENSE PLATE LAMP

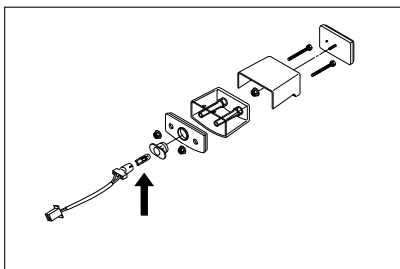

1. Remove the socket under the rear fender.
2. Push the bulb, turn it to the counter-clockwise, and pull it out.
3. To fit the replacement of bulb, push it in and turn it to the clockwise while pushing.

## ⦿ FUSE

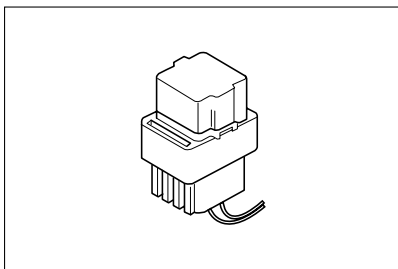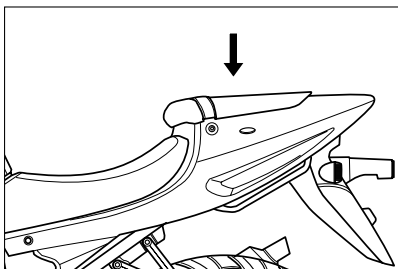

The fuse box is located behind the rear seat. If the engine suddenly stops while running or any electrical system fails to operate then the fuse must be checked.

In case a fuse blows there is a 15A spare fuse.

### **⚠ CAUTION**

**Never use other than specified 15A fuse. Installing a fuse of incorrect rating may seriously damage the electrical system. You should consult your Hyosung dealer or a qualified service mechanic immediately.**

## WHEN THE ENGINE REFUSES TO START

### ⊙ TROUBLE SHOOTING

If the engine refuses to start, perform the following inspections to determine the cause.

#### ● Fuel Supply Check


- ① Is there enough fuel in the fuel tank?
- ② Make sure there is enough fuel reaching the carburetor from the fuel pump.

#### ● Ignition System Check

- ① Remove a spark plug and reattach to the spark lead.
- ② While holding the spark plug firmly against the crankcase of the engine, push the starter switch with the ignition switch in the "ON" position, the engine stop switch in the "○" position, the transmission in neutral, the side stand up and the clutch disengaged.

If the ignition system is operating properly, a blue spark should jump a cross the spark plug gap.

- ③ If there is no spark, clean the spark plug. Replace it if necessary. Retry the above procedure with the cleaned spark plug or new one.
- ④ If there is still no spark, consult your **Hyosung** dealer for repairs.

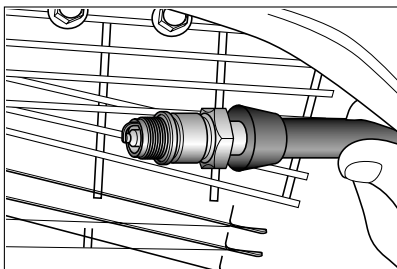

### ⚠ WARNING

Do not hold the spark plug close to the open spark plug hole in the cylinder head as gasoline vapor inside the cylinder should be ignited, creating a fire hazard.

#### ● Engine Stalling

- ① Check the fuel supply in the fuel tank.
- ② Check the ignition system for intermittent spark.
- ③ Check the engine idle speed.

### ⚠ CAUTION

When occur any trouble, the best way is to consult your **Hyosung** dealer for repairs.

### ⚠ WARNING

Performing the spark test improperly can cause a high voltage electrical shock or an explosion.

Avoid performing this check if you are not familiar with this procedure, or if you have a heart condition or wear a pacemaker. Keep the spark plug away from the spark plug hole during this test.

### WHEN KEEPING FOR LONG PERIOD

1. Supply enough the fuel in the fuel tank.
2. Do drain wholly the fuel in the carburetor.
3. Remove the battery from the motorcycle.

## CLEANING PROCEDURE

A thorough cleaning of your motorcycle is a necessary part of maintenance and will help keep your motorcycle looking and performing its best. Proper cleaning can also extend the life of your motorcycle.

It is important to clean and inspect your motorcycle after every ride if it is used in mud, brush, grass, water, salt water, or very dusty conditions.

The build-up of mud, brush, grass, etc, especially on the engine and exhaust system, can reduce engine cooling, conceal damage, or increase wear of certain parts. It is important to remove all debris during cleaning.

### CAUTION

High pressure washers can damage your motorcycle.

High pressure washers such as those found at coin-operated car washes have enough pressure to damage the parts of your motorcycle. It may cause rust, corrosion and increase wear.

Do not use high pressure washers to clean your motorcycle.

### ★ WASHING YOUR motorcycle

With some care, your motorcycle can be washed in a similar manner to washing an automobile.

## NOTE

Avoid spraying or allowing water to flow over the following places :

- Spark plug
- Fuel tank cap
- Carburetor

Use a garden hose at low pressure to remove the majority of dirt or other debris. Hand wash your motorcycle with a mild soap or detergent and water. Try to thoroughly remove all dirt and debris without excessive water pressure. Cloth rags, washing mitts or cleaning brushes can be used, be careful with brushes as they may scratch plastic or painted surfaces. Rinse the motorcycle thoroughly with clean water. Dry all areas using a chamois or soft absorbent cloth.

### ★ INSPECTION AFTER CLEANING

Remove the rags or wrapping from the exhaust pipe. For extended life of your motorcycle, lubricate according to "GENERAL LUBRICATION" section.

### WARNING

Operating motorcycle with wet brakes can be hazardous.



Wet brakes may not provide as much stopping power as dry brakes. This could lead to an accident.

Test your brakes after washing motorcycle, while riding at slow speed. If necessary, apply brakes several times to let friction dry out the pads.

Follow the procedures in the "INSPECTION BEFORE RIDING" section to check your motorcycle for any problems that may have arisen during your last ride.



# LABEL

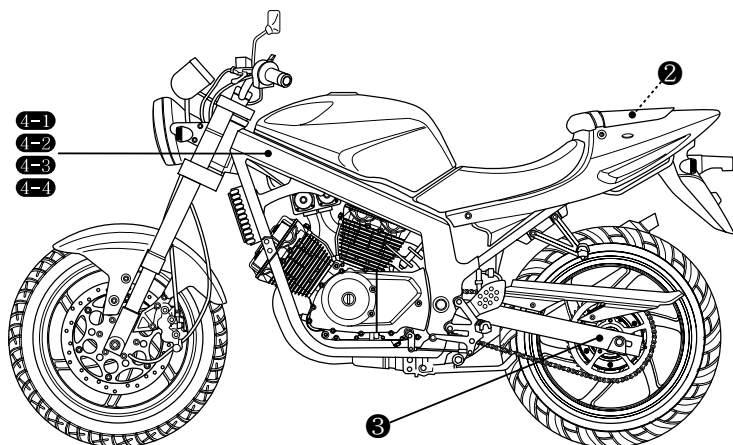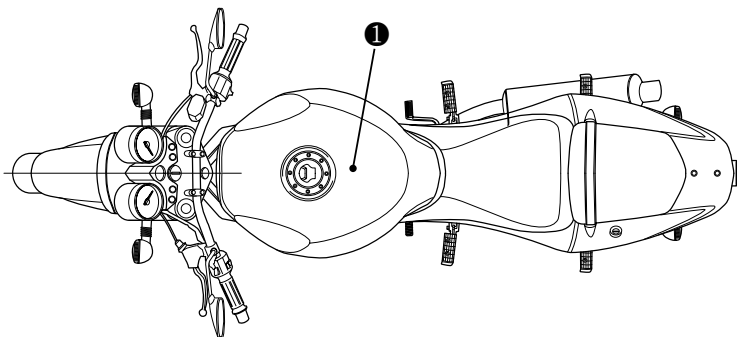

**NOTE :**

“ --- ” = means the invisible parts.

## WARNING

- BE FULLY AWARE OF THE OWNER'S MANUAL BEFORE OPERATING AND RIDING.
  - MAKE SURE TO WEAR A HELMET.
  - OBSERVE THE RESTRICTED SPEED.
  - DO NOT BE TOUCHED ON MUFFLER BECAUSE IT IS HOT.
  - DO NOT MAKE ILLEGAL MODIFICATION FOR THE SAFE RIDING.
  - TAKE THE INSPECTION AND THE MAINTENANCE ACCORDING TO THE REGULAR CHECKLIST OF THE OWNER'S MANUAL.
- THE CHECKLIST BEFORE RIDING
  - DASHBOARD, HORN, LAMP, OIL, BRAKE, TIRE (AIR PRESSURE, DAMAGE, ABNORMAL WEAR AND ETC.)
- USE THE HYOSUNG GENUINE OIL.

68319H05350-PL

1

## CAUTION

- DO NOT LOAD OVER MAXIMUM 1kg IN THE TRUNK.
- DO NOT PUT SOMETHING AFFECTED EASILY BY THE HEAT BECAUSE THE INSIDE OF TRUNK MAY BE HEATED.
- DO NOT PUT VALUABLES OR FRAGILES IN THE TRUNK.
- MAKE SURE THE SEAT WERE LOCKED. IN CASE OF RIDING WITH UN-LOCKED, IT CAN CAUSE AN ABNORMAL RIDING OR DANGEROUS IN AN EMERGENCY.
- WATER CAN COME INTO THE TRUNK ON WASHING AND ALSO BE CAREFUL WHEN SOMETHING IMPORTANT IS PUT IN THE TRUNK. DO NOT LAY CLOTH PIECE IN THE TRUNK UNDER THE SEAT. IT CAN BE A CAUSE OF UNEXPECTED ACCIDENT.

68350HM8150-PL

2

## WARNING

- AN IMPROPER TIRE PRESSURE CAN CAUSE DIFFICULTIES IN HANDLING, SERIOUS INJURIES OR DEATH.
- BEFORE RIDING, INSPECT THE TIRE PRESSURE, DAMAGE, ABNORMAL WEAR AND ETC. ACCORDING TO THE "INSPECTION BEFORE RIDING"
- ALWAYS MAINTAIN A PROPER TIRE PRESSURE AS SHOWN IN THE BELOW.

	FRONT	REAR
<b>SOLO RIDING</b>	29 psi (2.00kg/cm <sup>2</sup> )	32 psi (2.25kg/cm <sup>2</sup> )
<b>DUAL RIDING</b>	29 psi (2.00kg/cm <sup>2</sup> )	36 psi (2.50kg/cm <sup>2</sup> )
<b>TIRE SIZE</b>	110/70-17 54H	150/70-17 69H

68320HM150-PL

3

**HYOSUNG MOTORS & MACHINERY INC.**

**e9\*92 / 61\*0114**

**KM4MJ51E**

**85 dB(A) - 5000 min<sup>-1</sup>**

**4-1**

*( Comet 250 R )*

**HYOSUNG MOTORS & MACHINERY INC.**

**e9\*92 / 61\*0114**

**KM4MJ51B**

**85 dB(A) - 5000 min<sup>-1</sup>**

**4-2**

*( Comet 250 )*

**HYOSUNG MOTORS & MACHINERY INC.**

**e9\*92 / 61\*0114**

**KM4MF51E**

**84 dB(A) - 5250 min<sup>-1</sup>**

**4-3**

*( Comet 125 R )*

**HYOSUNG MOTORS & MACHINERY INC.**

**e9\*92 / 61\*0114**

**KM4MF51B**

**84 dB(A) - 5250 min<sup>-1</sup>**

**4-4**

*( Comet 125 )*

## SPECIFICATIONS

### DIMENSIONS AND DRY MASS

	<i>Comet 250 R</i>	<i>Comet 250</i>
Overall length	2,060mm (81.1 in)	2,080mm (81.9 in)
Overall width	655mm (25.8 in)	760mm (29.9 in)
Overall height	1,125mm (44.3 in)	1,120mm (44.1 in)
Wheelbase	1,435mm (56.5 in)	1,445mm (56.9 in)
Ground clearance	130mm (5.1 in)	180mm (7.1 in)
Mass	185kg (408 lbs)	170kg (375 lbs)

### ENGINE

	<i>Comet 250 R</i>	<i>Comet 250</i>
Type	Four-stroke, air cooled and oil cooled	←
Number of cylinder	V-2 cylinder	←
Bore	57.0mm (2.24 in)	←
Stroke	48.8mm (1.92 in)	←
Piston displacement	249 <sub>cm<sup>3</sup></sub> (15.2 in <sup>3</sup> )	←
Corrected Compression ratio	10.2 : 1	←
Carburetor	BDS26 TYPE(DOUBLE)	←
Starter system	ELECTRIC STARTER	←

### TRANSMISSION

	<i>Comet 250 R</i>	<i>Comet 250</i>
Clutch	Wet multi-plate type	←
Reduction ratio	3.290	←
Drive chain	520HO	←
Transmission	1st : 2.460	←
	2nd : 1.560	←
	3rd : 1.190	←
	4th : 0.960	←
	5th : 0.840	←

## CHASSIS

	<i>Comet 250 R</i>	<i>Comet 250</i>
Front suspension	Telescopic type	←
Rear suspension	Swing arm type	←
Caster	25.5°	←
Trail	90mm (3.54 in)	85mm (3.35 in)
Steering angle	27° (right & left)	33° (right & left)
Front tire size	110/70 - 17 54H	←
Rear tire size	150/70 - 17 69H	←
Front brake	Double disc	Disc
Rear brake	Disc	←

## ELECTRICAL

	<i>Comet 250 R</i>	<i>Comet 250</i>
Ignition type	"CDI" type	←
Ignition timing	13° B.T.D.C. at 2,000rpm ~30° B.T.D. C.at 6,000rpm	←
Spark plug	CR8E	←
Battery	12V 12Ah (MF)	←
Fuse	15A	←
Head lamp	[HI] : 12V - H1 : 55W×1 [LO] : 12V - H3 : 55W×1	[HI] : 12V - H4 : 60W×1 [LO] : 12V - H4 : 55W×1
License plate lamp	12V - 5W×1	←
Turn signal lamp	12V - 10W×4	←
Brake/Tail lamp	12V - 21/5W×1	←

## CAPACITIES

	<i>Comet 250 R</i>	<i>Comet 250</i>
Fuel tank	17.0 l	←
Engine oil	1,450 ml (Replace)	←
	1,500ml (Oil filter replace)	←
	1,800 ml (Overhaul)	←

## DIMENSIONS AND DRY MASS

	<i>Comet 125 R</i>	<i>Comet 125</i>
Overall length	2,060mm (81.1 in)	2,080mm (81.9 in)
Overall width	655mm (25.8 in)	760mm (29.9 in)
Overall height	1,125mm (44.3 in)	1,120mm (44.1 in)
Wheelbase	1,435mm (56.5 in)	1,445mm (56.9 in)
Ground clearance	130mm (5.1 in)	180mm (7.1 in)
Mass	180kg (397 lbs)	167kg (368 lbs)

## ENGINE

	<i>Comet 125 R</i>	<i>Comet 125</i>
Type	Four-stroke, air cooled and oil cooled	←
Number of cylinder	V-2 cylinder	←
Bore	44.0mm (1.73 in)	←
Stroke	41.0mm (1.61 in)	←
Piston displacement	124.7 <sub>cm<sup>3</sup></sub> (7.6 in <sup>3</sup> )	←
Corrected Compression ratio	11.3 : 1	←
Carburetor	BDS26 TYPE(DOUBLE)	←
Starter system	ELECTRIC STARTER	←

## TRANSMISSION

	<i>Comet 125 R</i>	<i>Comet 125</i>
Clutch	Wet multi-plate type	←
Reduction ratio	3.690	←
Drive chain	428SO	←
Transmission	1st : 2.750	←
	2nd : 1.790	←
	3rd : 1.350	←
	4th : 1.090	←
	5th : 0.910	←

## CHASSIS

	<i>Comet 125 R</i>	<i>Comet 125</i>
Front suspension	Telescopic type	←
Rear suspension	Swing arm type	←
Caster	25.5°	←
Trail	90mm (3.54 in)	76mm (2.29 in)
Steering angle	27° (right & left)	33° (right & left)
Front tire size	110/70 - 17 54H	←
Rear tire size	150/70 - 17 69H	←
Front brake	Disc	←
Rear brake	Disc	←

## ELECTRICAL

	<i>Comet 125 R</i>	<i>Comet 125</i>
Ignition type	"CDI" type	←
Ignition timing	13° B.T.D.C. at 2,000rpm ~ 30° B.T.D. C.at 5,000rpm	←
Spark plug	CR8E	←
Battery	12V 12Ah (MF)	←
Fuse	15A	←
Head lamp	[HI] : 12V - H1 : 55W×1 [LO] : 12V - H3 : 55W×1	[HI] : 12V - H4 : 60W×1 [LO] : 12V - H4 : 55W×1
License plate lamp	12V - 5W×1	←
Turn signal lamp	12V - 10W×4	←
Brake/Tail lamp	12V - 21/5W×1	←

## CAPACITIES

	<i>Comet 125 R</i>	<i>Comet 125</i>
Fuel tank	17.0 l	←
Engine oil	1,450 ml (Replace)	←
	1,500ml (Oil filter replace)	←
	1,650 ml (Overhaul)	←



Prepared by

**HYOSUNG MOTORS & MACHINERY INC.**

3rd Ed. DEC. 2005.

Printed in KOREA